
GL100-N/GL100-WL

PetitLOGGER

USER'S MANUAL

MANUAL NO.GL100-UM-151

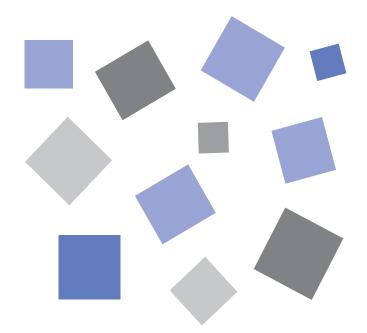

GRAPHTEC

To Ensure Safe and Correct Use

- To ensure safe and correct use of the GL100, read this Manual thoroughly before use.
- After having read this Manual, keep it in a handy location for quick reference as needed.
- Do not permit small children to touch the GL100.
- The following describes important points for safe operation. Please be sure to observe them strictly.

Conventions Used in This Manual

To promote safe and accurate use of the GL100 as well as to prevent human injury and property damage, safety precautions provided in this manual are ranked into the five categories described below. Be sure you understand the difference between each of the categories.



DANGER

This category provides information that, if ignored, is highly likely to cause fatal or serious injury to the operator.



WARNING

This category provides information that, if ignored, is likely to cause fatal or serious injury to the operator.



CAUTION

This category provides information that, if ignored, could cause physical damage to the GL100.



HIGH TEMPERATURE

This category provides information that, if ignored, is likely to cause burns or other injury to the operator due to contact with high temperature.



ELECTRICAL SHOCK

This category provides information that, if ignored, is likely to expose the operator to electrical shock.

Description of Safety Symbols





The \bigcirc symbol indicates action that is prohibited. Such prohibited action is described by an illustration or text within or next to the \bigcirc symbol.



The ① symbol indicates action that must be performed. Such imperative action is described by an illustration or text within or next to the ① symbol.

i

Safety Precautions



In the event of a malfunction, remove the batteries and do not attempt to use the device.

· Attempting to use the device when malfunctioning may cause an electrical shock or fire. Remove the batteries immediately and request repairs.

Do not use the device in the event that it is producing smoke, is unusually hot, is producing an unusual smell, or other similar circumstances.

Attempting to use the device when malfunctioning may cause an electrical shock or fire. Immediately move the device to a non-flammable location and, after confirming it is safe, remove the batteries and request for repairs.



Do not insert foreign objects into the device.

 Inserting metallic objects or flammable objects into the device may cause an electrical shock or fire.

Do not use the device for unintended purposes.

· Do not use the device for uses other than measuring.

Keep away from children.

• Do not setup the device in a place within the measuring location that children can reach. They may swallow the device and/or injure themselves.

Do not use the device if it is damaged.

· This can cause an electrical shock or fire hazard.



Do not allow the device to get wet.

· This can cause an electrical shock or fire hazard. Be especially careful when using the device near windows



during rain or snow or in coastal areas.



If fluid or foreign matters enters inside the GL100, turn off the Power switch and disconnect the power cord from the electrical socket.

- Use in such status may cause a fire hazard due to electrical shock or current leakage.
- Contact your sales representative or nearest Graphtec vendor to request repair.



Use prohibited

Never disassemble or remodel the GL100.

· Modifying this GL100 may cause an electrical shock or fire due to short circuiting and generating heat.



Do not input voltage that exceeds the permissible input voltage range that is specified on the GL100's

· Exceeding the specified voltage input range may cause electrical shock or a fire hazard.



Use prohibited

Safety Precautions



Do not put the device in any of the following places when installing it:

- •locations in direct contact with oily smoke or steam
- •locations with direct sunlight
- •locations that experience temperatures outside the operating range
- Putting the device into places like these may cause short circuiting, heat, deformation of the case, electrical shocks, fires and malfunctions.

Do not use the device in locations with severe mechanical vibration or large amounts of electrical static.

• Such location may impair the GL100's performance.



Use prohibited

Do not put heavy objects on top of the device nor climb on top of the device.

 Loss of balance may cause falling, which may cause injury or malfunction.

Do not insert fingers or other foreign objects into connectors or gaps in the device.

· This can cause injury or malfunction.

Do not clean the logger using a volatile solvent (such as thinner or benzine).

 Cleaning with volatile solvents may impair the GL100' s performance. If the GL100 becomes dirty, wipe it with a clean, soft cloth.



Use the specified batteries.

- Using the device with other batteries may cause electrical shock or fire hazard.
- The batteries and exterior of the LOGGER may be very hot.



HIGH TEMPERATURE



Be careful of gradual deterioration over time.

 Vibration and/or gradual deterioration over time may cause battery terminal contacts to not work properly.

Be careful of static electricity.

 Static electricity may damage the device. To prevent this from happening, touch a different metal object to discharge any built-up static electricity before touching the GL100.



CALITION

Do not touch the device with wet hands.

• This can cause an electrical shock or malfunction.



Remove the batteries when the device is not used for long periods.

• Battery leakage may cause malfunction.



Safety Precautions



When using the GL100-WL, note the following:

 If you have an implantable pacemaker or implantable defibrillator installed, radio signals from the device may have an effect on the operation of your implantable pacemaker or implantable defibrillator.



When using the GL100-WL in a medical establishment, note the following rules:

- Please turn off the power of this product in hospital wards.
- Each medical institution has its own usage prohibitions in various areas. Be sure to follow these.



When using the GL100-WL, note the following:

 Turn off the device in places where wireless radio signal use is restricted, such as on aircrafts and in hospitals. The device can have an effect on electronic devices, medical devices, etc., and may cause malfunctions.



When using the GL100-WL, note the following:

 In the event that the device has an effect on automatic electronic devices such as cars or elevators, immediately turn the GL100-WL off.



Do not use the device in any way not specified in this instruction manual. There is a danger that protective provisions will have not been put in place.



The module connection terminal is for use only with separately sold sensors and modules. Do not connect any other devices. Doing so may damage the GL100.



This GL100 is not meant for use with lifesaving devices or devices with mission-critical high reliability or high safety requirements (medical devices, aerospace devices, shipping devices, nuclear power devices, etc.). In the event that this GL100 causes injury or property damage when used under these circumstances, the maker assumes absolutely no responsibility and is not liable.

Introduction

Thank you for purchasing the GL100 Petit LOGGER.

Please read this manual thoroughly before attempting to use your new product to ensure that you use it correctly and to its full potential.

Notes on Use

Be sure to read all of the following notes before attempting to use the GL100 Petit LOGGER.

1. Note on the CE Marking

The GL100 Petit LOGGER complies with the following standards.

- N 61326-1 (Class A) standard based on the EMC directive (2004/108/EC)
- EN 61010-1:2010 3rd standard based on the LVD directive (2006/95/ EC)
- EN 301 489-17/-1, EN 300 328 standards based on the R&TTE directive (1999/5/EC)

Although the GL100 complies with the above-mentioned standards, be sure to use it correctly in accordance with the instructions and notes provided in this manual.

Moreover, use of the GL100 by incorrect procedures may result in damage to the GL100 or may invalidate its safeguards. Please confirm all of its notes regarding use and other related information to ensure correct use.

2. Warning

This is a Class A product according to the EMC directive. In a domestic environment, this product may cause radio interference or may be affected by radio interference to the extent that proper measurement cannot be performed.

3. Notes on Radio Law

This GL100-WL contains a wireless module that Radio Law certified. Make sure to note the following points:

- Do not remove the technical standards compliance label. Do not use the device if it does not have a label on it.
- This GL100 uses the 2.4GHz frequency band.


The following devices and transmitters use the same frequencies and should not be used near this GL100:

- · Microwave ovens
- · Pacemakers and other industrial, science, and medical devices
- Radio transmitters used in mobile body identification devices on factory production lines, etc. (transmitters requiring licensing)
- Specified low-power radio transmitters (transmitters not requiring licensing)Communications may become slower or impossible due to radio interference.
- The signal may be weak or communications may become slower or impossible depending on the circumstances this GL100 is used in. Take particular note of steel-reinforced, metal, concrete, and other structural materials that can inhibit radio waves.

• This GL100 is meant for use in Japan, the US, and Europe. It has not been certified for use under any other country's radio laws.

The following are each region's certification marks.

Japan



US

Contains FCC ID:YOPGS1011MIPS

Canada

Contains IC ID:9154A-GS1011MIPS

Europe......CE Mark

4. Notes for Safe Operation

(1) When connected to high-voltage signal through an analogue signal from 4ch voltage / temperature terminal (GS-4VT), do not touch the central line of the input terminal's signal line. There is a risk of electric shock due to high voltage.

- 5. Notes on Functions and Performance
 - (1) Use AA alkaline batteries. Using other types of batteries may cause damage to the device.
 - (2) Using the module, sensor, etc. with the vent hole covered may result in inaccurate measurements.
 - (3) Using this GL100 in the following environments may cause inaccurate measurements or damage:
 - Places with high temperatures or high humidity, such as direct sunlight and heaters.
 Allowable emperature range: -10 to 50°C, allowable humidity range: 0 to 80% RH, non-condensing

If Condensation Occurs

Condensation occurs in the form of water droplets on the device surfaces and interior when the GL100 is moved from a cold location to a warm one. Using the GL100 with condensation will cause the GL100 to malfunction. Wait until the condensation has evaporated before turning on the power.

CAUTION

When Temperature and humidity sensors (GS-TH) and GL100-N/GL100-WL are used at the same time, they should be used in the GL100-N/GL100-WL operating environment.

- · Locations subject to excessive salt spray or heavy fumes from corrosive gas or solvents.
- Excessively dusty locations.
- Locations subject to strong vibrations or shock.
- Locations subject to surge voltages and/or electromagnetic interference.
- (4) If the GL100 becomes soiled, wipe it off using a soft, dry cloth. Do not use the organic solvents (such as thinner or benzene).
- (5) Do not use the GL100 in the vicinity of other devices which are susceptible to electromagnetic interference.

- (6) Measured results may not conform to the stated specifications if the GL100 is used in an environment which is subject to strong electromagnetic interference
- (7) Position the input signal cables as far away as possible from any other cables which are likely to cause electromagnetic interference.
- (8) GS-TH Temperature and Humidity Sensors:
 - Humidity sensors measure the change in dielectric capacity of water adsorption. As a result, humidity
 from organic materials such as fine particles or exhaust gas may have an effect on the sensor. Use
 in environments with large quantities of these organic materials may lead to significant measurement
 inaccuracies.

(9) GS-CO2 CO2 Sensor:

Because exhaled CO2 may have an effect on the sensor readings, do not use the sensor to take
measurements near the face. Additionally, should air flow to the sensor be blocked, it will result in
inaccurate readings, so be sure to keep vent holes open.

(10) GS-LXUV Illumination / Ultraviolet Sensor

- When measuring illumination or ultraviolet light that can have harmful effects on the eyes or skin, be sure to use protective eyewear, shielding, etc.
- If the sensor becomes dirty it may affect measurements, so wipe it with a soft cloth when it becomes
 dirty.
- Take care to avoid cracking the sensor when handling it. If the sensor is damaged or cracked it may
 affect measurements, so replace the sensor.

(11) Others

- The GS-TH temperature and humidity sensor, the GS-CO2 CO2 sensor, and the S-LXUV illumination
 / ultraviolet sensor may gradually deteriorate over time depending on usage circumstances and
 environment, so we recommend periodically replacing these sensors every year or so.
- The GL100-N/GL100-WL units meet IP54 standards when the sensor or sensor module is connected and then the connector cover and battery cover are closed.
 - Note that you cannot use the GL100-N/GL100WL units with devices that do not meet IP54 standards (except for the 3-axis acceleration sensor) when sensors and sensor modules are located in the same environments.
 - Additionally, when there is deterioration or damage to the gasket on the connector cover or battery cover of the GL100-N/GL100-WL, it no longer meets IP54 standards, so be sure to either periodically replace them or have them repaired.
- If the non-optional device is connected to the GL100-N/GL100-WL's module connection terminal or the GS-DPA branch adapter connector, the GL100-N/GL100-WL or branch adapter may be damaged.
 Please do not connect it.

Notes on the Use of This Manual

- (1) All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, without the prior written permission of Graphtec Corporation.
- (2) The specifications and other information in this manual are subject to change without notice.
- (3) While every effort has been made to supply complete and accurate information about this product, please address any inquiries about unclear information, possible errors, or other comments to your sales representative or nearest Graphtec vendor.
- (4) Notwithstanding the preceding paragraph, Graphtec Corporation assumes no liability for damages resulting from the use of the information contained herein or of the product.

About Registered Trademarks

Microsoft and Windows are registered trademarks or trademarks of Microsoft Corporation in the U.S. and elsewhere.

Other company names and product names included in this manual are registered trademarks or trademarks of their respective companies.

Copyright

All copyrights regarding this manual belong to Graphtec Corporation.

CONTENTS

To E	nsure Safe and Correct Use	i
Safe	ty Precautions	ii
Intro	duction	
CHAI	PTER 1 General Description	
1.1	Overview	1-2
1.2	Features	1-2
1.3	Operating Environment Ambient Operating Conditions Warming-up Before Use Configuration When in Use	1-3 1-4
1.4	Explanation of Symbols Used on the Equipment	1-5
CHAI	PTER 2 Checks and Preparation	
2.1	Checking the Outer Casing	2-2
2.2	Checking the Accessories	
	GL100-N/GL100-WL Standard Accessories	
2.3	Checking the Optional Accessories. Module Accessories	2-3
2.4	Nomenclature and Functions	2-4
2.5	Various Connections Module Connection Terminal microSD USB I/F Alarm Output Terminal	
2.6	Various Modules	
	4ch Voltage / Temperature Terminal (GS-4VT): Optional 3-axis Acceleration / Temperature Sensor (GS-3AT): Optional 4ch Thermistor Terminal (GS-4TSR): Optional Adapter for AC Current Sensor (GS-DPA-AC): Optional Illumination / Ultraviolet Sensor (GS-LXUV): Optional CO2 Sensor (GS-CO2): Optional Temperature / Humidity Sensor (GS-TH): Optional Adapter for Branch Adapter (GS-DPA): Optional	

CHAPTER 3 Measure and Set 3.1 3.2 3.3 3.4 **CHAPTER 4 Specification** 4.1 4.2 4.3 Specifications of Application Software4-20

INDEX I-1

CHAPTER 1 General Description

This chapter provides a general description of the GL100 and its features.

Product Summary

- 1.1 Overview
- 1.2 Features
- 1.3 Operating Environment
- 1.4 Explanation of symbols used on the equipment

1.1 Overview

The GL100 series is a small, light-weight data logger that operates with batteries and/or a USB cable connected to a power source.

You can record continuously for long periods of time depending on the power saving settings.

The GL100 series can be easily set up and be used to measure anywhere due to its reduced body size. You can remotely perform measurements and control the device by using the GL100-WL, the wireless model.

You can also conduct multipurpose measurements by using the various sensors and modules.

1.2 Features

- · You can use it to measure easily due to its small size.
- The GL100 can record data using its internal memory and/or a microSD card.
 - The recorded data can be transferred directly to a computer using a USB cable connection, or transferred wirelessly with the GL100-WL type.
- The GL100 meets IP54 standards for basic water resistance and dustproofing, so it can be used in a wide range of measuring environments.
- The GL100 can use commercial batteries (two AA alkaline batteries) and/or a USB cable connected to a power source.

However, some of the sensors have power source restrictions.

- The GL100 has an alarm output terminal. When the alarm level has been exceeded after the alarm has been set on the various sensors and modules, a signal will be output while also confirming the alarm with the LED.
- All condition settings and measurement data can be checked on the GL100's LCD.
- A wide range of temperature (-20°C to 85°C) and humidity (0% to 100% R.H.) can be measured at the same time by using the temperature and humidity sensor module (GS-TH).
- The 4ch voltage / temperature terminal sensor module can measure up to 4ch of voltage (20mV to 50V and 1V to 5V) and thermocouples (K and T types). It can also measure 4ch logic/pulse separately at the same time (GS-4VT).
- The 4ch thermistor terminal module can be connected to the appropriate thermistor sensor and measure up to 4ch of temperature (-40°C to 105°C and -40°C to 120°C). It can also measure 4ch logic/pulse separately at the same time (GS-4TSR).
- Acceleration oscillation in three directions (2G, 5G and 10G) can be measured using the 3-axis acceleration / temperature sensor (GS-3AT). Temperature (-10°C to 50°C) can also be measured at the same time with the 3-axis acceleration / temperature sensor's internal temperature sensor.
- Voltage can be measured for single-phase two-wire systems, single-phase three-wire systems, three-phase three-wire systems, etc. by using the AC current sensor adapter and AC current sensor (GS-DPA-AC and GS-AC**A).
- Illumination (0 to 200,000 lx) and ultra violet rays (0 to 30 mW/cm²) can be measured at the same time by using the illumination / ultraviolet sensor module (GS-LXUV).
- CO₂ (0 ppm to 9999 ppm) can be measured using the CO₂ sensor (GS-CO₂).
- You can connect two sensors from among the GS-TH, GS-CO2, and GS-LXUV and perform a combined measurement by using the branch adapter.

1.3 Operating Environment

This section explains the operating environment for the GL100.

Ambient Operating Conditions

- 1) Ambient Temperature and Humidity (Use the GL100 within the following ranges)
 - Temperature range: -10 to 50°C
 - Humidity range: 20% to 80% RH, non-condensing

When connected to the sensor below and used in the same operating conditions, operating conditions are as listed above.

- <Temperature and humidity sensor>
- Temperature range: -20 to 85°C
- Humidity range: 0% to 100% RH
- 2) Environment (This GL100 is designed for indoor use. Do not use in the following locations.)
 - When the GL100 body is simple-waterproof and dustproof to IP54 standards but the sensors and modules attached are not in compliance with the IP54, please do not used in this environment.
 - · A Location such as being exposed to direct sunlight
 - · Locations exposed to salty air, corrosive gases, or organic solvents
 - Dusty locations
 - · Locations subject to vibration or impact
 - · Locations subject to voltage surge or electromagnetic interference such as lightning or electric furnaces

CHECKPOINT //

If Condensation Occurs

Condensation occurs in the form of water droplets on the device surfaces and interior when the GL100 is moved from a cold location to a warm one. Using the GL100 with condensation will cause the GL100 to malfunction. Wait until the condensation has evaporated before turning on the power.

- 3) Installation Category (Overvoltage Category)
 - The GL100 belongs to Installation Category II defined in IEC 60664-1.
 - Never use the GL100 for Installation Category III or IV.
- 4) Overvoltage Category

Overvoltage categories as defined by IEC 61010 are as follows:GL100-N/GL100-WL: Overvoltage category I. When connected to a PC/AC adapter: Overvoltage category II

- * Be sure to use either a commercially available AC adapter or a PC (with a IEC 60950-1 certified Limited Power Source USB output) with this GL100.
- * Furthermore, do not use this GL100 with IEC 61010-defined overvoltage category III or IV.
- 5) Altitude
 - This GL100 can be used at altitudes up to 2,000m.
- 6) Power
 - Two alkaline batteries or a USB cable connection (5V, 200 mA or higher) can be used to provide power.
- 7) Degree of Contamination
 - This GL100 is IEC 60664-1-certified for use in up to Contamination Degree 2.
- 8) Use
 - This GL100 is intended for use as industrial equipment.


Warming-up Before Use

The main module should be allowed to warm up with the power turned on for approximately 30 minutes to ensure that it operates according to the specified performance.

Configuration When in Use

When using this module, please use it on a flat surface or mounted on a wall using wall-mounting brackets.

< Usage Configuration >

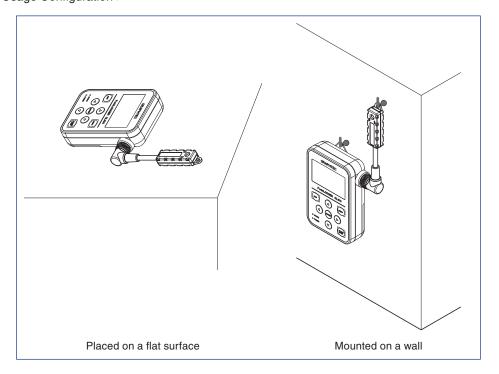



CAUTION If you use the main module in other position than described in the above, the measurement accuracy may not meet the specifications.

1.4 Explanation of Symbols Used on the Equipment

Symbols	Meaning	Display locations	Notes	
<u> </u>	Caution (Refer to Manual)	GL100 Rear Panel Section Module (option) rear panel section	 Avoid touching the input terminals and leads of the input terminal's signal cable to prevent electrical shock due to high voltage. If a voltage exceeding the specified value is input, the main unit will be damaged. Install the specified cable to each I/F connector. 	
<u></u>	Earth (Ground) Terminal	Measuring object Measuring object Measuring object Measuring object Measuring object External ground	If the measured value is unstable due to the exogenous noise, it is probably better that the cables are thicker between the GND terminal of DUT and the GND terminal of GS-4VT. In addition, the both GND terminals should be connected to the earth for same potential level. If a voltage exceeding the specified value is input, the main unit will be damaged. GL100 GL100GS-4VT Isolated input GS-4VT Logic GND terminal	

CHAPTER 2 Checks and Preparation

This chapter explains how to check the main module's external casing and accessories, and how to prepare the main module for operation.

Product Summary

- 2.1 Checking the Outer Casing
- 2.2 Checking the Accessories
- 2.3 Checking the Optional Accessories
- 2.4 Nomenclature and Functions
- 2.5 Various Connections
- 2.6 Modules

2.1 Checking the Outer Casing

After unpacking, check the GL100's outer casing before use. In particular, please check for the following:

- Surface scratches
- Other flaws such as stains or dirt

2.2 Checking the Accessories

After unpacking, check that the following standard accessories are included.

• GL100-N : Standard model • GL100-WL : Wireless LAN model

GL100-N/GL100-WL Standard Accessories

Item	Description	
Quick Start Guide	GL100-UM-85x	1
CD-ROM	User's Manual, Application software	1
USB cable	MicroB-A approximate 0.5 m	1

2.3 Checking the Optional Accessories

Module

Item	Model	Description
4ch Voltage / Temperature Terminal	GS-4VT	Terminal for 4ch voltage / temperature measurement (thermocouple only)
3-axis Acceleration / Temperature Sensor	GS-3AT	For 3-axis acceleration and temperature measurement
4ch Thermistor Terminal	GS-4TSR	Terminal for 4ch thermistor temperature measurement (GS thermistor sensor)
Adapter for AC Current Sensor	GS-DPA-AC	Adapter for 2ch AC power measurement (AC current sensor only)
CO ₂ Sensor	GS-CO2	CO ₂ measurement sensor
Illumination / Ultraviolet Sensor	GS-LXUV	Sensor for 1ch illuminance / 1ch ultraviolet measurement
Temperature / Humidity Sensor	GS-TH	Temperature / Humidity Sensor measurement adapter
Adapter for Branch adapter	GS-DPA	2ch sensor measurement adapter

Accessories


Item	Model	Description
GS thermistor sensor	GS-103AT-4P	GS-4TSR only (approx. 3 m) Thermistor (-40 to 105°C)
	GS-103JT-4P	GS-4TSR only (approx. 3 m) Ultra-thin shape thermistor (-40 to 120°C)
AC current sensor (50A)	GS-AC50A	GS-DPA-AC-dedicated CT (50A)
AC current sensor (100A)	GS-AC100A	GS-DPA-AC-dedicated CT (100A)
AAC current sensor (200A)	GS-AC200A	GS-DPA-AC-dedicated CT (200A)
GS extension cable	GS-EXC	1.5 m extension cable (between GL100 and sensor, branch adapter and sensor)
Shunt resistance	B-551	250Ω (±0.1%) Rated power of 1 W, Maximum service voltage of 15.8 V, Built to order

Nomenclature and Functions

GL100-N/GL100-WL

Functions of the GL100-N and GL100-WL (with wireless LAN function) are not same.

Use it after confirming the model name on the rear name plate.

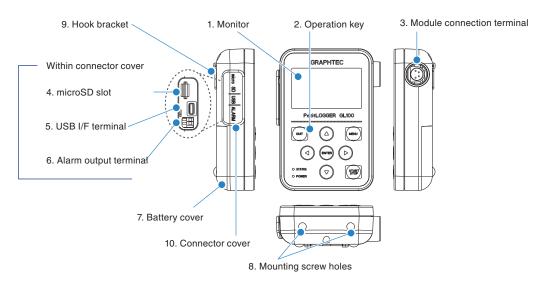

- 1. Monitor The settings and measured values are displayed.
- 2. Operation key Key operation is performed on the screen.
 - MENU key : Information about the measurement condition settings and this

module is displayed.

: Used to select when operating the menu.

 ENTER key : Used to confirm when operating the menu.

 QUIT key : Used to return to the previous screen or displaythe free-running

screen when setting the menu.

 START/STOP key : Used to start/stop the measurement.

 STATUS lamp : The measurement information of this module is displayed in

orange.

 POWER lamp : The power supply status is displayed in green.

3. Module connection terminal Used to connect to various measurement module.

PetitLOGGER GL100

QUIT

o STATUS

6. Alarm output terminalAlarm signal is output from this terminal.

7. Battery coverTwo AA alkaline batteries are housed in the battery cover.

8. Mounting screw holesThe size of the mounting screw holes is $M4 \times L5$.

9. Hook bracketA metal fixing that suspends and secures the product.


10. Connector coverThis is the cover for each connector.

CAUTION The module connection terminal is used for the sensor and module sold separately. Do not connect the sensor and module other than them. The GL100 may be damaged.

Descriptions of Screen Display


Initial Screen

The following screen is displayed after initializing.

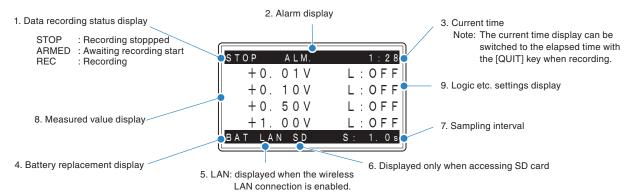

Descriptions of Setting Screen

Pressing [MENU] key goes to setting menu mode.

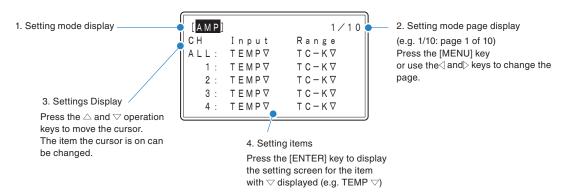

Various Connections 2.5



- <Power-on>: (Refer to 3.2 Power-on.)
- 1) Supply the power.
- 2) The GL100 is ready for operation by holding down [MENU] key.
- 3) Connect the module.

The following screen is displayed. Perform the procedure below.

Module Connection Terminal


Connect the module (sensor, terminal, and adapter, etc.) sold separately to the module connection terminal.

When the module is not connected, the "Sensor error!!" appears and the setting screen is not displayed. Be sure to connect the module to be used before operating the GL100.



CAUTION Please perform the following procedure to replace the module when the power is supplied.

Free-running screen

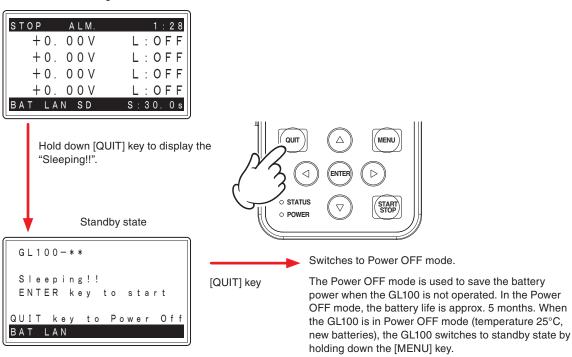

Even when the "Sleeping!!" is displayed, the module can be replaced.

While the "Initializing" is executed, please do not operate anything.



microSD

To insert or remove the microSD, follow the procedure below.

Gently push the microSD card into the slot until it is locked. Make sure to insert the card the right way. 000 microSD slot

When ejecting the microSD card, push it in gently, then remove the card.



- CAUTION When mounting, the STATUS lamp will turn on while it checks the amount of available space. Please wait
 - . When the microSD is inserted, the data free space is checked even in free-running, therefore The SD display and STATUS lamp are lit for a moment.


USB I/F

The USB I/F is used to supply the external power to the GL100-N/GL100-WL and communicate and control the data. For the power supply capacity, refer to the section "Power Supply Connection".


Alarm Output Terminal

Specification: Photo-coupler insulation switching type

Rating: 30V, 50mA (power dissipation 150 mW)



Within connector cover




*CAUTION

When pressing here with a flat screwdriver, please press the tip of the driver so as not to be deeper than the connector surface. If the connector is pressed too much, it will be damaged.

2.6 Various Modules

4ch Voltage / Temperature Terminal (GS-4VT): Optional

This section describes the name and function of each part.

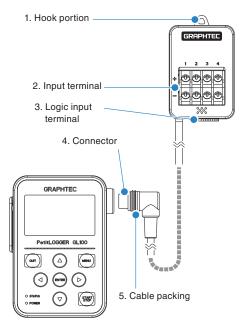

- 1. Hook portion Used to mount to a wall.
- 3. Logic input terminalUsed to apply logic input.
- 4. Connector Used to connect to the connector on the GL100 module.
- 5. Cable packingThis packing is used when connecting the connector.



CAUTION This module is not dustproof or waterproof. Please use it in a proper usage environment.



After connecting the GL100 to modules or sensors, please always check/set the time and date.



< Extension cable >

The module can be used approx. 1.5 m away from the GL100 by using an extension cable for GS (GS-EXC). However, you cannot connect and use multiple extension cables.

Tip of Each Input Terminal Function


1. Voltage input

Make sure to pay attention to the + and - terminals when connecting it.

- + High-voltage terminal (terminal input on the input signal's high-voltage side)
- Low-voltage terminal (terminal input on the input signal's low-voltage side)


2. Thermocouple input

Connect thermocouple to the + and - terminals.

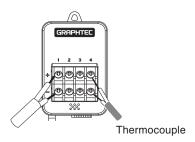

3. Current input

Attach shunt resistance when measuring the current input.




Shunt resistance

E.g.: For 4-20mA, add 250 Ω (±0.1%) resistance and measure with a 1-5V range.

* For shunt resistance, use the B-551 (option).


4. Logic / pulse input

- + No. 1 to No. 4: High-voltage terminal (terminal input on the input signal's high-voltage side)
- G: Low-voltage terminal (terminal input on the input signal's low-voltage side)

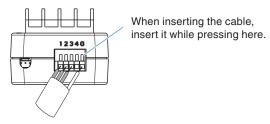



- . G is the GND terminal for this module.
- For the maximum input voltage, refer to 3 Regarding Maximum Input Voltage."

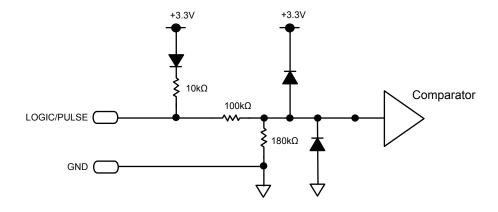

CAUTION Notes on temperature measurement

When measuring the temperature, please pay attention to the following.

- . Do not block the air vents of the GL100. Leave a clear space of at least 20 cm around it.
- To measure stably the temperature, please warm up for 30 minutes or more after power-on.
- · When rapid temperature change occurs in the input terminals, the error may occur on the measurement.
- · When the measurement is performed in noisy place, be sure to connect to the ground through the GND terminal.

Regarding Maximum Input Voltage

To avoid break-downs or short-circuiting accidents, please make sure to abide by the items written below.

In case the input voltage exceeds the specifications, the circuit at the input part will break down. Please don't input it.

<Input terminal (+) / Input terminal (-) interval>

Maximum input voltage: DC60Vp-p

<Input terminal (-) /Input terminal (-) interval>

Maximum input voltage: 60Vp-p

<Input terminal (-) /GND terminal interval> Maximum input voltage: DC60Vp-p Withstand voltage: 350Vp-p/1min.

Logic/Pulse


<Input terminal (+) / GND terminal interval>

Maximum input voltage: DC24V

· For the display screen when maximum input voltage is applied, if a voltage exceeding 10% of full scale for the measurement range is input, the "+++++" is displayed for positive direction, or the "- - - - -" is displayed for negative direction.

3-axis Acceleration / Temperature Sensor (GS-3AT): Optional

This section describes the name and function of each part.

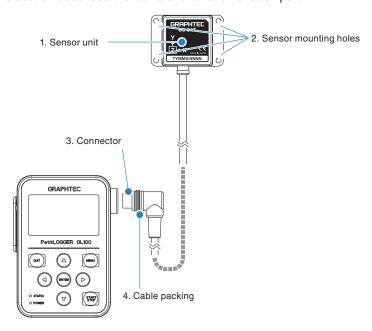

- 2. Sensor mounting hole Used to fix the sensor.
- 4. Cable packingThis packing is used when connecting the connector.

CAUTION This sensor unit is dustproof and splash-resistant to IP54 standards. It can be used in the same conditions as the module. Please take care not to drop or shock the sensor.



After connecting the GL100 to modules or sensors, please always check/set the time and date.



< Extension cable >


The module can be used approx. 1.5 m away from the GL100 by using an extension cable for GS (GS-EXC). However, you cannot connect and use multiple extension cables.

Tip of the Sensor Mounting

Check the operating direction of the sensor unit, then securely mount it using four M3 screws to what is to be measured.


1. Connecting to the module

When connecting this module, you can also use the GS extension cable (GS-EXC; sold separately) for more convenient connection.

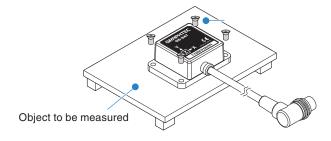

CAUTION If the sensor's mounting is loose, it will give inaccurate readings.

Sensor unit mounting dimensions (Unit: approx. mm)





< Extension cable >


The module can be used approx. 1.5 m away from the GL100 by using an extension cable for GS (GS-EXC). However, you cannot connect and use multiple extension cables.

There are $\pm 2G$, $\pm 5G$, and $\pm 10G$, or $\pm 20m/s^2$, $\pm 50m/s^2$, and $\pm 100m/s^2$ in the acceleration range.

However, the gravitational acceleration is $1G = Approx. 9.807 \text{ m/s}^2$.

4ch Thermistor Terminal (GS-4TSR): Optional

This section describes the name and function of each part.

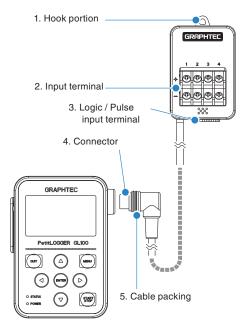

- 3. Logic/Pulse
 - input terminal Used to input logic / pulse.
- 5. Cable packingThis packing is used when connecting the connector.

CAUTION The GL100 is not waterproof and dustproof. Please use it in a proper usage environment.



After connecting the GL100 to modules or sensors, please always check/set the time and date.




< Extension cable >

The module can be used approx. 1.5 m away from the GL100 by using an extension cable for GS (GS-EXC). However, you cannot connect and use multiple extension cables.

Tip of Each Input Terminal Function

1. Thermistor input

Connect the GS thermistor sensor (GS-103AT-4P or GS-103JT-4P; each sold separately) to the +/-.

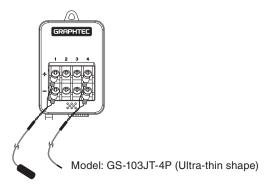


Model: GS-103AT-4P

WARNING This terminal is for thermistor input only. Make sure not to input voltage or electric current, as this can cause damage.

2. Logic / pulse input

Connect GS thermistor sensor (GS-103AT-4P or GS-103JT-4P) sold separately to the + and - terminals.

- + No. 1 to No. 4: High-voltage terminal (terminal input on the input signal's high-voltage side)
- G: Low-voltage terminal (terminal input on the input signal's low-voltage side)

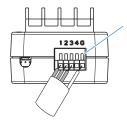

When inserting the cable, insert it while pressing here.

CAUTION G is the GND terminal for this module.



For the circuit configuration, please refer to" Tip of each input terminal function" in "4ch voltage / temperature terminal (GS-4VT)" described above.

Regarding Maximum Input Voltage

To avoid break-downs or short-circuiting accidents, please make sure to abide by the items written below.

In case the input voltage exceeds the specifications, the circuit at the input part will break down. Please don't input it.


Logic / Pulse

<Input terminal (+) / GND terminal interval>

Maximum input voltage: DC24V

Adapter for AC Current Sensor (GS-DPA-AC): Optional

This section describes the name and function of each part.

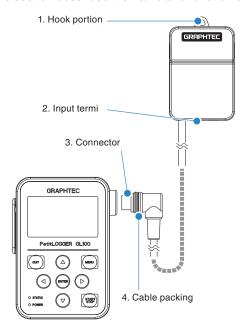

- 2. Input terminal Terminal that connects to the AC Current Sensor (sold separately).
- 3. Connector Used to connect to the connector on the GL100 module
- 4. Cable packingThis packing is used when connecting the connector.



After connecting the GL100 to modules or sensors, please always check/set the time and date.



< Extension cable >


The module can be used approx. 1.5 m away from the GL100 by using an extension cable for GS (GS-EXC). However, you cannot connect and use multiple extension cables.

Tip of the sensor mounting

1. Connect the AC Current Sensor (GS-AC**A, sold separately) (1) Recording to the module.

Connecting : Push the connector in until it locks in.

Disconnecting : Pull the connector out while pressing down on the lock on the bottom with your finger.

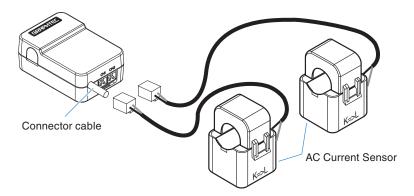


MARNING The connector is exclusively to be used to connect the AC Current Sensor. Do not connect it to voltages, other electrical currents, etc. It will damage the module.



CAUTION Pulling the AC Current Sensor's cable and holding the sensor by the cable will damage the cable's wires.

2. How to measure with AC Current Sensor

Remove the AC Current Sensor's lock, insert the measurement cable and push it in until it locks (putting the cable in the wrong way will cause the module to measure incorrectly).

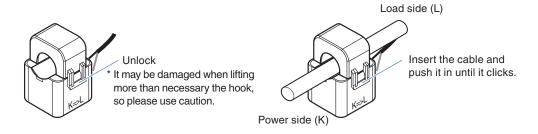


CHECKPOINT //

Clamp ch1 or ch2 to L-phase when using single-phase 2-wire

Clamp ch1 and ch2 to R-phase and S-phase respectively when using single-phase 3-wire.


Clamp ch1 and ch2 to R-phase and T-phase respectively when using 3-phase 3-wire.

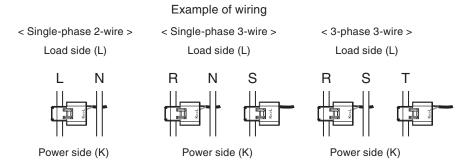

Tip of Settings

1. Various settings

In AMP setting screen, select the measurement mode. Next select the sensor type to be used and then set the measurement voltage and power factor.



MEAS. Mode

AC1φ2W (2ch)		
Input	Off, 50, 100, 200A	
DC-V	90 to 264V	
Power factor	0.30 to 1.00	
AC1φ3W, AC3φ3W		
Input	50, 100, 200A	
DC-V	90 to 264V	
Power factor	0.30 to 1.00	

Input: : Be sure to match to the AC current sensor type to be used.

DC-V : Set the effective voltage to be measured. Since it is used to internally convert the current value,

be sure to set to the correct value.

Power factor : Specify the power factor to be measured.

The power factor is ratio of active power to (apparent) power, depends on the measuring object.

Since the power factor is used to internally convert the current value to the power value, it is required to adjust according to the measuring object.

Formula used internally

Actually the current value is measured. The power value is converted by multiplying the AMP setting voltage by the current value measured with the power factor (ratio of active power). (See the following formula.)

AC1 ϕ 2W : Measurement setting when single-phase 2-wire is used

2ch measurement is possible.

* Power = Measured current x Voltage x Power factor

AC1 ϕ 3W : Measurement setting when single-phase 3-wire is used

* Power = (Measured current (ch1) + Measured current (ch2)) x Voltage x Power factor

AC3 ϕ 3W : Measurement setting when three-phase 3-wire is used

* Power = ((Measured current (ch1) + Measured current (ch2)) ÷ 2) x Voltage x √3 x Power factor


2. Example of measurement

(1) Measurement with single-phase 100V, 2 loads

When the following connection is established, each current measurement for I, Ia, and Ib is possible.

(The clamp in the following figure indicates the measurement point of AC current sensor.)

However, when measured by the GL100, it is not necessarily I = Ia + Ib (Since it is calculated in vector quantity.).

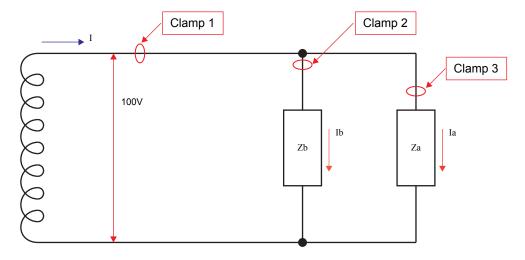

(2) Single-phase 3-wire (100V and 200V)

(The clamp in the following figure indicates the measurement point of AC current sensor.)

1) Single-phase 3-wire (AC1 ϕ 3W): Measured at the clamp 1 (CH1) and clamp 2 (CH2).

Current effective value of I1 = Ia + Ib is measured at the clamp 1 (CH1).

Current effective value of I3 = -Ia - Ic is measured at the clamp 2 (CH2).

Note: Positive value is displayed regardless of the current direction because it is effective value.

Total power is calculated in accordance with the set voltage 100V and power factor.


2) Single-phase 2-wire (AC1 ϕ 2W): Measured at the clamp 3, clamp 4 and clamp 5 in single-phase 2-wire mode. Current effective value of lb is measured at the clamp 3.

Current effective value of -lc is measured at the clamp 4.

Note: Positive value is displayed regardless of the current direction because it is effective value.

Crrent effective value of la is measured at the clamp 5.

Each power is calculated in accordance with the set voltage 100V and power factor at the clamp 3 and clamp 4. Power is calculated in accordance with the set voltage 200V and power factor at the clamp 5.

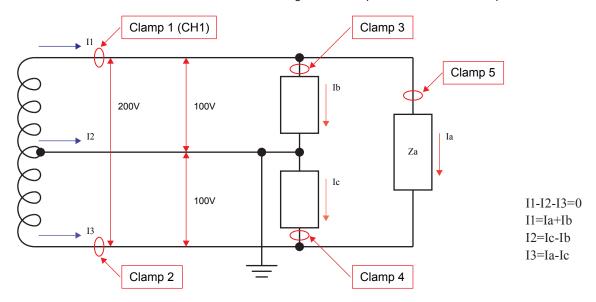

3) How to measure with three-phase 3-wire

(The clamp in the following figure indicates the measurement point of AC current sensor.)

Blondel's theorem: "When the number of electrical conductors is n, the multi-phase power can be measured by the watt-meter (n-1)". The Δ -connection and Y-connection are described below. The current effective value of R and T power line are measured at the clamp 1 and 2.


Using the Blondel's theorem, the GL100 calculates the power with the following formula.


Power = ((Measured current (CH1) + Measured current (CH2))÷2) x Set voltage x √3 x Set power factor

Measurement method: Measured at the clamp 1 (CH1) and clamp 2 (CH2) in three-phase 3-wire (AC3 ϕ 3W) mode.

The current effective value of R (U) phase is measured at the clamp 1 (CH1), and the current effective value of T (W) phase is measured at the clamp 2 (CH2).

The power is calculated in accordance with the set voltage and power factor.

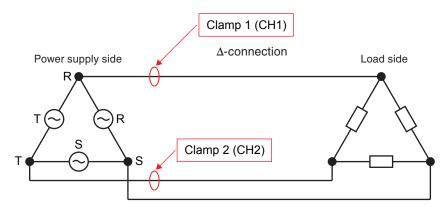


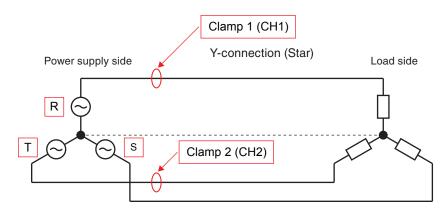

Note: If the current flows in the neutral conductor in the Y-connection, the measurement error occurs because the sum of the three phase currents is not zero.

(3) Display screen


In display screen

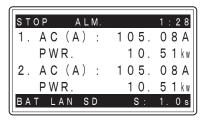


• The instantaneous power only is displayed during free-running.

Accumulated Value

During recording, you can switch to the accumulation screen by operating $[\triangleleft]$ and $[\triangleright]$ keys.







Normal display

Accumulated value display

How to clear the accumulated value


To clear the accumulated value, follow the following procedure.

• When you start, the accumulated value is cleared and the accumulation operation is performed.

The accumulation operation is performed even in trigger waiting state.

Illumination / Ultraviolet Sensor (GS-LXUV): Optional

This section describes the name and function of each part.

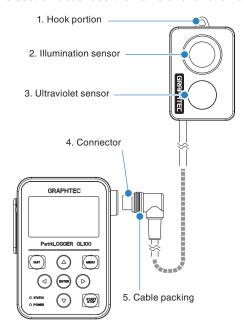

- 2. Illumination sensor Sensor unit that measures illumination rays.
- 3. Ultraviolet sensor Sensor unit that measures ultraviolet rays.
- 5. Cable packingThis packing is used when connecting the connector.

- CAUTION When measuring ultraviolet rays that have an effect on the eyes or the skin, wear protective glasses, apply light shielding, etc.
 - · If the sensor unit becomes dirty, this may affect measurements. Wipe it down with a soft cloth.
 - · Make sure to handle the sensor unit in a way that it will not crack. If the sensor unit is cracked it may affect easurements. Replace the sensor if cracked.



After connecting the GL100 to modules or sensors, please always check/set the time and date.




< Extension cable >

The module can be used approx. 1.5 m away from the GL100 by using an extension cable for GS (GS-EXC). However, you cannot connect and use multiple extension cables.

Tip of measurement


The illumination wavelength is 560 nm and the peak of spectral sensitivity is UV wavelength 370 nm.

<Spectral Sensitivity Characteristic>

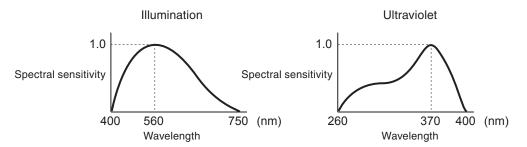

Accumulated Value

During recording, you can switch to the accumulation screen by operating $[\langle]$ and $[\rangle]$ keys.

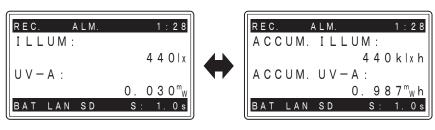

Normal display

Accumulated value display


How to clear the accumulated value

To clear the accumulated value, follow the following procedure.

• When you start, the accumulated value is cleared and the accumulation operation is performed. The accumulation operation is performed even in trigger waiting state.

CO2 Sensor (GS-CO2): Optional

This section describes the name and function of each part.

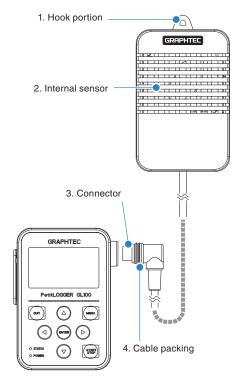

- 2. Internal sensor There is an internal sensor that detects the CO2.

The lamp for detecting flashes every two seconds.


- 3. Connector Used to connect to the connector on the GL100 module.
- 4. Cable packingThis packing is used when connecting the connector.



- CAUTION The battery is not available for power supply. Use the USB cable to supply the power.
 - · Do not use the module close to your face. Your breath may affect measurements.
 - . Blocking the module's aperture may cause the airflow to affect measurements.



After connecting the GL100 to modules or sensors, please always check/set the time and date.




< Extension cable >

The module can be used approx. 1.5 m away from the GL100 by using an extension cable for GS (GS-EXC). However, you cannot connect and use multiple extension cables.


Temperature / Humidity Sensor (GS-TH): Optional

This section describes the name and function of each part.

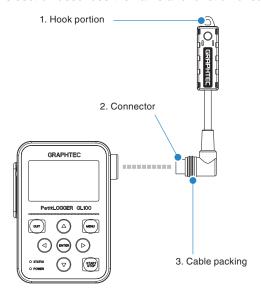

- 3. Cable packing This packing is used when connecting the connector.

CAUTION Attaching just this module to the wall, etc. will damage the connector cable. Always connect to the GL100.





CAUTION The temperature sensor measures the change in capacitance of the conductivity caused by moisture absorption. Therefore, dust, fumes and other organic compound may affect measurements. Usage in an environment with a large quantity of these substances floating about will cause large measurement deviations.



After connecting the GL100 to modules or sensors, please always check/set the time and date.




< Extension cable >

The module can be used approx. 1.5 m away from the GL100 by using an extension cable for GS (GS-EXC). However, you cannot connect and use multiple extension cables.

Accumulated Value

During recording, you can switch to the accumulation screen by operating $[\triangleleft]$ and $[\triangleright]$ keys.

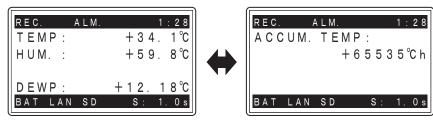

Normal display

Accumulated value display

How to clear the accumulated value


To clear the accumulated value, follow the following procedure.

• When you start, the accumulated value is cleared and the accumulation operation is performed.

The accumulation operation is performed even in trigger waiting state.

Adapter for Branch Adapter (GS-DPA): Optional

This section describes the name and function of each part.

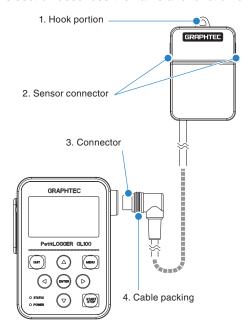

- 2. Sensor connector The sensor connectors are on the left and right.
- 3. Connector Used to connect to the connector on the GL100 module.
- 4. Cable packingThis packing is used when connecting the connector.

- CAUTION The GL100 has basic water protection but this module has no water protection. Be careful when installing and handling.
 - . Before connecting to the GL100, always connect all of the sensors to the branch adapter and then connect.
 - . When using the CO2 sensor in combination with other sensors, always use a USB cable connection as the power source.
 - . The sensor connector is used for GS-LXUV, GS-CO2 or GS-TH only. Please do not connect the device other than them. The GL100-N/GL100-WL may be damaged.



< Extension cable >

The module can be used approx. 1.5 m away from the GL100 by using an extension cable for GS (GS-EXC). However, you cannot connect and use multiple extension cables.

Tip of the sensor combination.

! CAUTION It is not possible to be used by connecting two same sensors.




< Extension cable >

The module can be used approx. 1.5 m away from the GL100 by using an extension cable for GS (GS-EXC). However, you cannot connect and use multiple extension cables.

There are the following three sensor combinations.

1. Combined illumination / ultraviolet sensor and temperature and humidity sensor measurement

Composite measurement can be done by using the illumination / ultraviolet sensor (GS-LXUV) and the temperature and humidity sensor (GS-TH) (each sold separately).

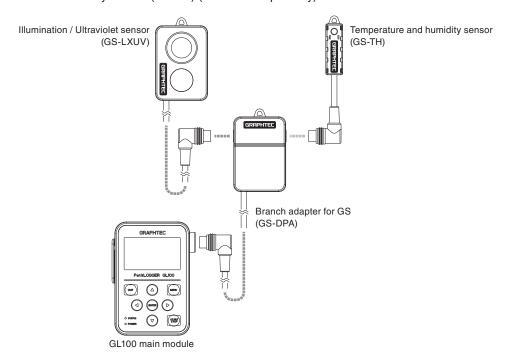


2. Combined CO2 sensor and temperature and humidity sensor measurement

Composite measurement can be done by using the CO₂ sensor (GS-CO₂) and the temperature and humidity sensor (GS-TH) (each sold separately).

MARNING

If the CO₂ sensor (GS-CO₂) is included in the assembly, it cannot be powered with batteries.

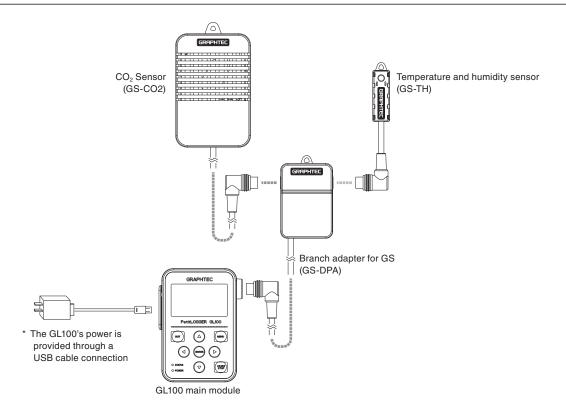


3. Combined CO2 sensor and illumination / ultraviolet sensor

Composite measurement can be done by using the CO₂ sensor (GS-CO₂) and the illumination / ultraviolet sensor (GS-LXUV) (each sold separately).



If the CO2 sensor (GS-CO2) is included in the assembly, it cannot be powered with batteries.

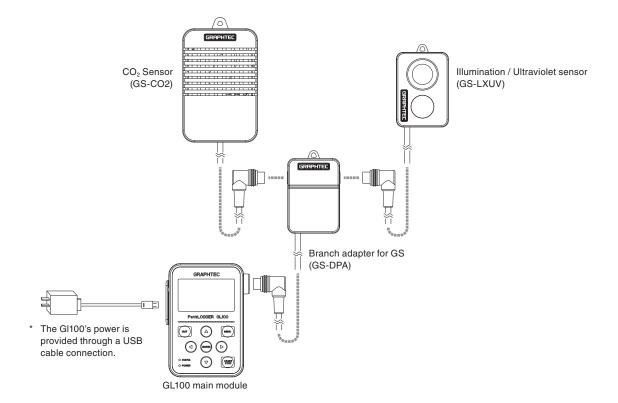


Accumulated Value

By switching the displayed data, the recorded data can be displayed in detail during data recording.

1. Combined measurement of the illlumination / ultraviolet sensor and temperature and humidity sensor

In display screen, two measurements of illumination / ultraviolet sensor and temperature and humidity sensor are displayed.

During recording, you can switch to the accumulation screen by operating [] and [] keys.



Normal display


Accumulated value display by pressing once

Accumulated value display by pressing twice

2. Combined measurement of the CO2 sensor and temperature and humidity sensor

In display screen, two measurements of CO2 sensor and temperature and humidity sensor are displayed.

During recording, you can switch to the accumulation screen by operating $[\triangleleft]$ and $[\triangleright]$ keys.




Normal display

Accumulated value display

3. Combined measurement of the CO2 sensor and illlumination / ultraviolet sensor

In display screen, two measurements of CO₂ sensor and illumination / ultraviolet sensor are displayed.

During recording, you can switch to the accumulation screen by operating $[\triangleleft]$ and $[\triangleright]$ keys.



Normal display

Accumulated value display

How to clear the accumulated value

To clear the accumulated value, follow the following procedure.

• When you start, the accumulated value is cleared and the accumulation operation is performed.

The accumulation operation is performed even in trigger waiting state.

CHAPTER 3 Measure and Set

This chapter explains how to check the main module's external casing and accessories, and how to prepare the main module for operation.

Product Summary

- 3.1 Before Setting Up
- 3.2 Power-on
- 3.3 Date/Time Adjustment
- 3.4 Measurement Procedure

3.1 Before Setting Up

When you connect the module and power supply to the GL100, various screen display and operation are possible.

First, set the date/time and language (English/Japanese) and then set up various settings.

1) Power-on : Refer to "3.2 Power-on".

2) Setting date : When the power is consumed, the set values returns to the default values. Be sure to set them in

accordance with "3.3 Date/Time Adjustment".

3) Setting language: The default display language is English. To switch the display language to Japanese, refer to "

Setting Language" in "3.4 Measurement Procedure".

Power-on 3.2

This GL100 can be powered by alkaline batteries, an AC adaptor (USB cable connection) or a PC (USB cable connection).

Refer to the following description.



CAUTION Wait about 20 seconds until the power is turned on again after power off.


If the sensors and modules are not recognized, check the connections and restart the GI100. Turn on after waiting about 20 seconds.

When the power is supplied, it is ready for operation by holding down the [MENU] key.

How to Switch On the Power


When the screen is not displayed after power-on, the GL100 is ready for operation by holding down [MENU] key.

When the module is not connected, the "SENSOR ERROR!!" is displayed. When the module is connected properly, the "Sleeping!!" is displayed.

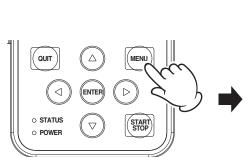



Module unconnected

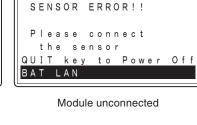



"Sleeping!!" screen displayed when the module is connected properly

G L 1 0 0 - * * Sleeping!! ENTER key to start QUIT key to Power 0 f fBAT LAN

"Sleeping!!" screen displayed when the module is connected properly




- TIP <When using GL100-WL>
 - · When the wireless LAN mode in the I/F setting is other than OFF, the wireless LAN is enabled in Standby state.
 - . When the wireless LAN is not used, set the wireless LAN mode in the I/F setting to OFF. In the case of battery use, the alkaline battery life is extended.

How to Switch to Power OFF Mode

To switch to this mode while the "Sleeping!!" screen is displayed, press [QUIT] key.

(This screen is displayed when the power is supplied and the module is connected.)

Standby state

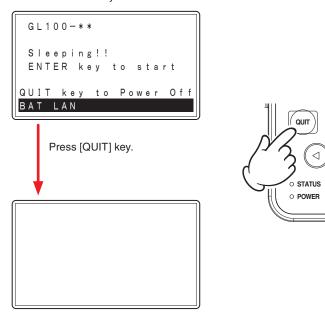



In this case, there is nothing displayed in this screen.

The GL100 is ready for operation and the "Sleeping!!" screen above is displayed by holding down [MENU] key.

- · When BAT (Low Battery Status) is displayed in the bottom left corner of the LCD screen, it is not possible to proceed to the next screen for the battery shortage.
 - Press [QUIT] key to switch to Power OFF Mode and replace the battery.
- · When BAT (Low Battery Status) and LAN connecting state is displayed in the bottom left corner of the LCD screen, it is not possible to proceed to the next screen for the battery shortage.
 - Press [QUIT] key to switch to Power OFF Mode and replace the battery. In this case, since the LAN connection is disabled, re-connect to the LAN after replacing the battery.



CAUTION There is no screen display while the screen saver is running, but the Power lamp (green) flashes. In such cases, the screen is displayed by pressing any key.

> When the Power lamp (green) does not flash, the GL100 is in Power OFF state. In such cases, hold down [MENU] key.




<Power OFF Mode>


By switching to the Power OFF Mode, the battery life is extended when not in use. New alkaline battery life is about 5 months. (at 25°C).

1. How to install the batteries

Loosen the screws on the back cover.



- (2) Remove the back cover.
- (3) Insert two AA alkaline batteries.
 - * Make sure to insert the batteries the right way.

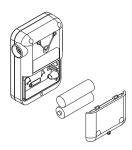

(4) Attach the back cover and tighten the screws.






CAUTION Make sure to use two size AA alkaline batteries.

Do not use zinc-carbon batteries or nickel hydride (rechargeable) batteries.

2. How to connect AC adapter (USB cable connection)

(1) Connecting AC adapter

Connect this module to a commercial AC adaptor using a USB cable.



- CAUTION Make sure to use an AC adaptor rated 5V (at least 1A).
 - · Smartphone chargers cannot be used, because they usually have overcharge protection lines that may identify this module as being fully charged and stop output.

(2) How to connect to PC

Please use the included USB cable and connect the USB I/F terminal to a PC.

* IEC60950-1-certified product with a USB output compatible with the Limited Power Source.



- CAUTION Make sure to use a USB cable connection rated 5V (at least 200mA).
 - · Do not connect via a USB hub.
- · The recommended power sources for each combination of modules are listed below.

Setting items	Sensor module connected	Built-in alkaline battery	USB cable connection
Temperature and humidity measurement	GS-TH	В	Α
3-axis acceleration / Temperature Measurement	GS-3AT	В	А
4ch voltage / temperature measurement	GS-4VT	С	Α
4ch thermistor temperature measurement	GS-4TSR	В	А
Illuminance / Ultraviolet measurement	GS-LXUV	В	А
CO2 measurement	GS-CO2	D	А
AC current / power measurement	GS-DPA-AC	В	Α
Temperature and humidity + CO2 measurement	GS-DPA+GS-TH+GS-CO2	D	А
Temperature and humidity + illumination /UV measurement	GS-DPA+GS-TH+GS-LXUV	В	А
CO2 + illumination / UV measurement	GS-DPA+GS-CO2+GS-LXUV	D	А

- *: The GS-DPA listed is a measurement that uses the branch adapter for GS.
- A: Full operation
- B: This works on alkaline batteries.
- C: This works on alkaline batteries, but power consumption is relatively high, the operating time will be shorter.
- D: Cannot be used as a power source

• DC current consumption is as follows.

When driving in the batteries, use as a reference of battery consumption.

Model	Power	Wireless	LCD	Screen-	SD	Consumption current (mA			mA)				
Wodei	Supply	LAN	Backlight	saver	Card	TH	ЗАТ	4VT	4TSR	AC	LXUV	CO2	
			MAX	OFF	No	15	17	120	24	29	24	-	
	Battery	OFF	OFF	OFF	No	6	8	110	15	20	15	-	
	(3V)	OFF	-	ON	No	5	7	109	14	19	14	-	
GL100-WL			-	ON	Yes	6	8	110	15	20	15	-	
GLI00-WL			MAX	OFF	No	108	108	168	112	120	115	135	
	USB (5V) ON Battery (3V) OFF	USB	ON	OFF	OFF	No	102	102	162	108	116	110	130
		ON	-	ON	No	100	100	160	107	114	109	128	
			-	ON	Yes	102	102	162	109	116	111	130	
				MAX	OFF	No	14	16	118	22	28	22	-
		OEE	OFF	OFF	No	5	7	108	14	19	14	-	
		OFF	-	ON	No	4	6	107	13	18	13	-	
GL 100 N			-	ON	Yes	5	7	108	14	19	14	-	
GLI00-IN			MAX	OFF	No	18	21	79	25	31	25	46	
	USB	OFF	OFF	OFF	No	13	16	74	20	26	20	41	
	(5V)	OFF	-	ON	No	12	15	73	19	25	19	40	
			-	ON	Yes	13	16	74	20	26	20	41	

^{*} The above value is the average value of the body + sensor.

^{*} There is no change in consumption current by the sampling rate.

^{*} The consumption current increases up to about 20 mA while accessing the SD card.

^{*} When the CO₂ sensor is used, the consumption current increases periodically (about two-second intervals) about 500 mA.

Date/Time Adjustment 3.3

After connecting the module and power source to the GL100, set the date and time in accordance with the following procedure.



CAUTION Life of the internal clock back-up battery is about 10 hours.


When the power has been not supplied for a long time, the set date and time are reset. Always check the date and time after connecting the module. If this date and time is wrong, the data name when recorded is different from the real time.

CHECKPOINT //

- Hold down the [QUIT] key (approx. 3 seconds) to put the module into standby state.
- . In the case of battery-powered, put the module into standby state automatically if you do not operate for 3 minutes.
- Press [ENTER] key in Standby state to return to the free-running screen.
- 1. Set up the power source
- 2. Prepare the GL100-N/GL100-WL and modules.

If not connecting the module, it is not possible to set.

- 3. Perform the following procedure (GL-TH is used in this procedure).
 - 1) Before connecting the module, the following screen is displayed.




Module unconnected state

2) Connect the (GL-TH) module to the GL100-N/GL100-WL.



The following screen is displayed after connecting it.



Recognition of module types

The GL100-N/GL100-WL is in standby state after recognizing the module type.




Standby state


3) Press [ENTER] key to display the free-running screen.



The free-running screen is displayed after confirming the module conditions.

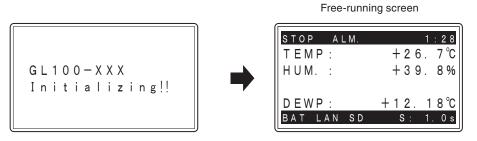


4) Press [MENU] key to display the setting screen. First page of the setting screen is displayed..

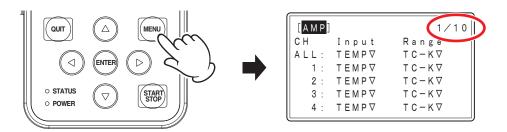


5) Display the date and time adjustment page (8/10).


Press $[\nabla]$ key or [MENU] key until the page is switched to the "OTHER-1" page.

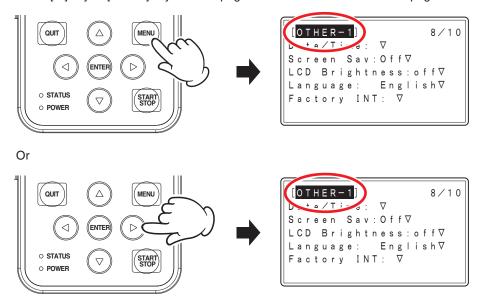


6) Select the display mode (Mode).

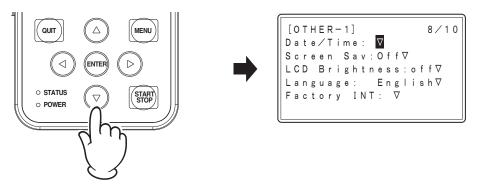

Press [ENTER] key to display the "Mode" setting screen.

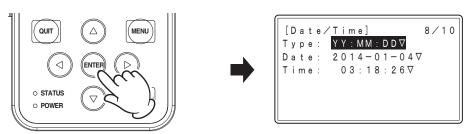


Again press [ENTER] key to select the Display mode using $[\triangle]$ or $[\nabla]$ key. Press [ENTER] key to confirm it.

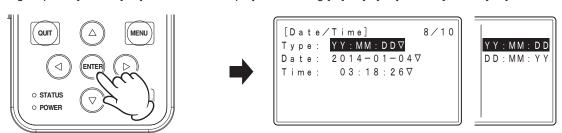


7) Set the date.

Press [▽] key to highlight the Date.

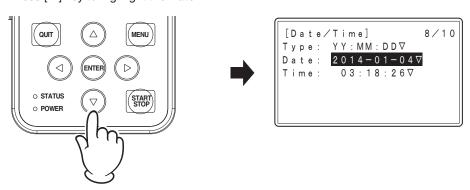


Again press [ENTER] key to display the screen to change the value.




Press $[\triangle]$ or $[\nabla]$ key to increase or decrease the value.

To adjust the value of MM:DD, highlight the value to be modified by operating $[\triangleleft]$ or $[\triangleright]$ key and then adjust it by operating $[\triangle]$ or $[\triangleright]$ key. Press [ENTER] key to confirm it after completion.




8) Set the time.

Press [▽] key to highlight the "Time".

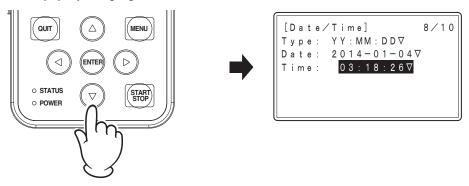

Press [ENTER] key to display the screen to change the value.



Press $[\triangle]$ or $[\nabla]$ key to increase or decrease the value.


Hghlight the value to be modified by operating $[\triangleleft]$ or $[\triangleright]$ key and then adjust it by operating $[\triangle]$ or $[\triangleright]$ key.

Press [ENTER] key to confirm it after completion.



9) Complete the Data/Time adjustment

When completing the settings, press [QUIT] key to return to the free-running screen.

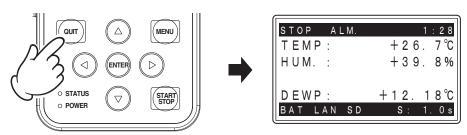

Measurement Procedure

The measurement procedure is described in the following order.

- 1. Supply the power
- 2. Connect the modules
- 3. Set the common items (OTHER-1)
- 4. Set the measurement conditions
- 5. Start or stop the measurement
- 6. How to confirm the recorded data

1. Supply the power

Supply the power to the GL100-N/GL100-WL (Refer to "3.2 Power-on".).


2. Connect the modules

Connect the module to display the free-running screen. (Refer to Step 3 in "3.3 Date/Time Adjustment".).

3. Set the common items (OTHER-1)

In setting screen, set the common items (Refer to Step 4 in "3.3 Date/Time Adjustment".).

Common settings (OTHER-1)



Date/TimeBe sure to check the date and time after power-on.

Mode	YY:MM:DD, DD:MM:YY	
Date	2014-07-01, 07-01-2014	
Time	10:10:00 (Hour:Minute:Second)	

Screen SavSet the time to turn off the screen when the GL100 is not in operation.

Screen-saver	Off, 1, 2, 5, 10, 20, 30, 60 min.

CAUTION There is no screen display while the screen saver is running, but the Power lamp (green) flashes. In such cases, the screen is displayed by pressing any key.

> When the Power lamp (green) does not flash, the GL100 is in Power OFF state. In such cases, hold down [MENU] key.

• LCD BrightnessAdjust the brightness of LCD backlight.

LCD brightness	Off, Dark, Middle, Bright
----------------	---------------------------

LanguageThe display language can be switched to English or Japanese.

(The default display language is English.)

Language	English, Janpanese
i Lailuuaue	Liigiisii, Jaiipaliese

• Factory INTReturn to the factory settings.

All settings will be reset, so please use caution.


Yes: (ENTER)	When [ENTER] key is pressed, the settings are initialized.
No: (QUIT)	To quit this screen without changing, press [QUIT] key.

<Display language of GL100-N/GL100-WL>

Initial menu is displayed in English.

When you want to display in English, switch to English in accordance with the following procedure.

- 1) Supply the power to the GL100-N/GL100-WL.
- 2) Next, connect the module to the GL100-N/GL100-WL (Example of GS-TH connection).

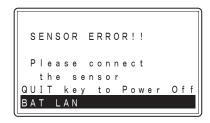

Module unconnected state




Recognition of module types



Standby state





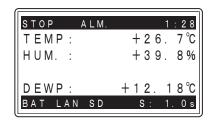

Free-running screen

3) Press [MENU] key to display the setting screen.


First page of the setting screen is displayed.






4) Display the language display item.

Press [MENU] key until the "OTHER-1" is displayed.

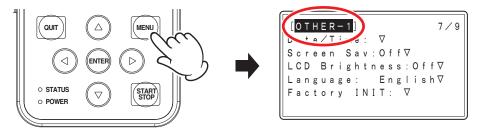


5) Select the language display.


Using [▽] key, highlight the "Language" (English).

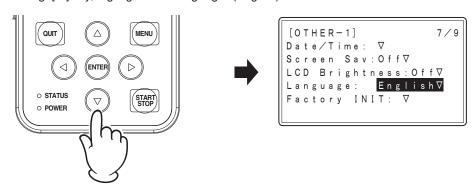


Press [ENTER] key to display the "Language" setting screen.

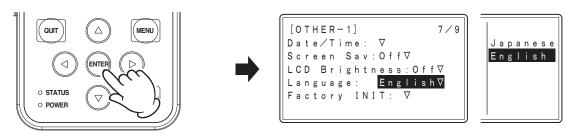

Using $[\triangle]$ and $[\nabla]$ keys, select the "English".

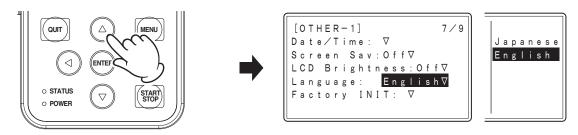

Press the [ENTER] key to confirm it.

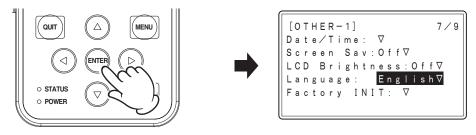

The English display procedure is complete.

4. Set the measurement conditions

In Setting screen, set the measurement conditions.

The measurement conditions varies depending on the module. Refer to the USER'S MANUAL for each module.

The following shows an example. (Example of GS-4VT connection)

AMP

Set the conditions of input signal to be measured.

(The displayed information varies depending on the module.)

```
      [AMP]
      1 / 10

      CH
      Input
      Range

      ALL:
      TEMP∇
      TC-K∇

      1:
      TEMP∇
      TC-K∇

      2:
      TEMP∇
      TC-K∇

      3:
      TEMP∇
      TC-K∇

      4:
      TEMP∇
      TC-K∇
```

ALL	The settings of 1 to 4 channels can be set at a time.
1 to 4 Input	Set Off, Voltage, Temperature.
Range	Voltage: 20, 50, 100, 200, or 500 mV,
	1, 2, 5, 10, 20, 50V; 1-5V
	Temperature: TC-K (K-type thermocouple), TC-T (T-type thermocouple)

LOGIC

Set the conditions (input or slop) of Logic/Pulse input signal.

(The displayed information varies depending on the module.)

```
[LOGIC] 2/10

Input Mode: Logic∇

CH: Input Slope

1: Off∇

2: Off∇


3: Off∇

4: Off∇
```

Input Mode	Logic/Pulse
Logic	Set Off, Voltage, Temperature
Range	Voltage: 20, 50, 100, 200, 500mV
	1, 2, 5, 10, 20, 50V; 1-5V
	Temperature: TC-K (K-type thermocouple), TC-T (T-type thermocouple)

DATA

Set the data recording conditions.



• SamplingSets the timing of data capture.

Sampling	0.5, 1, 2, 5, 10, 20, 30 sec.
	1, 2, 5, 10, 20, 30, 60 min.

• Capture MODESets the interval of data file.

Capture MODE	Continuous	The data from the start to the stop is recorded in a file. However, the file size is approx. 1.9GB per one file.
	1Hour	Data file is generated every hour after starting.
	24Hour	Data file is generated every 24 hours after starting.



- Wherf Continuous is selected, the data file is not generated when the power is consumed. It is recommended that you set the '24Hour" or '1Hour" periodically generated data file.
- . When the 'Capture Mode' is set to 1Hour or 24Hour, a few points of data points may be moved depending on the sampling rate. Duplication and omission of the data does not occur.
- Capture DISTSelect the internal memory (4.9M bytes) or micro SD card.

However, you cannot select the micro SD card when it has not been inserted.

Capture DIST	Memory, SD card
--------------	-----------------


Recommended SD card: TS4GUSDHC4 (Transcend)



1) When selecting the SD card

When the Capture DEST" is switched from Memory to SD card, the following screen is displayed.


Press [ENTER] key to copy the contents in the Memory to the SD card.



When the copy is complete, the free space is checked and then the space is displayed. When pressing [QUIT] key, the free space is checked and then the space is displayed without copying it.

2) When selecting the Memory

When switching from SD card to Memory, the following screen is displayed. When [ENTER] key is pressed, the memory is erased. (It takes about 3 minutes.)



When pressing [QUIT] key, the Memory is set.

Tip of memory recording time

The memory recording time varies depending on the memory capacity. For the recording time, refer to the recording time in the following table.


Recording conditions

- Recording destination: Internal memory (calculated by 4.9MB)
- Sampling: 30 sec. or 1 min.
- * Max. recording time = (Max. capacity÷Record length) x Sampling interval

Setting items	Model	Record length	Max. recording value): App	,
		(Byte)	Sampling 30 sec.	Sampling 1 min.
Temperature / humidity setting	GS-TH	14	127	254
3-axis acceleration / temperature measurement	GS-3AT	12	148	297
4ch voltage / temperature measurement	GS-4VT	22	81	162
4ch thermistor temperature measurement	GS-4TSR	38	46	93
Illuminance / ultraviolet measurement	GS-LXUV	16	111	223
AC current / power measurement	GS-DPA-AC	20	89	178
CO2 measurement	GS-CO2	6	297	594
Temperature / humidity + CO2 measurement	GS-TH+GS-CO2	16	111	223
Temperature / humidity + illuminance / ultraviolet measurement	GS-TH+GS-LXUV	18	68	137
CO2 + illuminance / ultraviolet measurement	GS-CO2+GS-LXUV	26	99	198

TRIGGER

Set the data recording start/stop conditions.



• TRIG SettingSet the recording start/stop conditions.

TRIG Setting	Off	Pressing the [START/STOP] key on this module will start/stop recording.
	Start	The recording will start with the trigger source conditions after pressing the [START/STOP] key. The recording will stop after pressing the [START/STOP] key.
	Stop	The recording will start after pressing the [START/STOP] key and will be stopped with the trigger source conditions.


• TRIG SourceSet the trigger conditions.

TRIG Source	Off	
	Alarm	Operates when alarm occurs.
	Date/Time	Operates with the set date and time.

ALARM

Set the conditions which the alarm information is sent.

(The settings vary depending on the module).




Alarm	Off	
	Level	Determine the conditions with the numerical setting.

I/F

The GL100-WL only can be set.

* When using the GL100-N, this cannot be set.

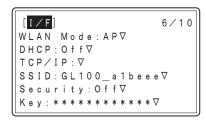

• WLAN ModeSet the identifier of the access point.

Off	This is the setting when the wireless function is not used.
Access point	Base unit (When the base unit receives the connection request from the computers on the communication network, it intermediates the communication to the network.)
Station	Set the child unit.

• DHCPIP address is automatically allocated.

Access point

Set to On when you want to automatically allocate the IP address to the wireless LAN child unit (PC, smartphone, or tablet, etc.) connected to the GL100. Conversely, set to Off when setting IP address to the child unit without allocating it.

Station

When the wireless LAN base unit to be connected has DHCP function, by enabling the function, IP address is automatically allocated to the base unit. When the DHCP function is disabled, IP address is required to manually allocate in the TCP/IP page.

DHCP	Off, On

• TCP/IPSet the communication protocol of IP Address, Subnet Mask, and Gateway. (The values are an example.)

IP address	192.168.***.***
Subnet mask	255.255.255.000
Gateway	192.168.***.**

• SSIDThis is the identification ID of wireless LAN.

The wireless LAN child unit to be connected to the GL100 is required to set with respect to the connection to this SSID. When operating the child unit in the access point mode, it is possible to use it without modification.

• SecurityWireless LAN connection is encrypted for security.

Through the settings other than Off, a third party who does not know the key is not able to connect to the GL100-WL. Usually use the WPA or WPA2.

* In the case of the station, enter the security scheme and encryption key.

Auto	WPA/WPA2 is automatically identified.	
	This is not used in access point mode.	
Off	Encryption is disabled.	
WEP	This is a simple encryption method.	
	Set the 13-character key.	
WPA	This is more robust encryption scheme than WEP.	
WPA2	Set the 8 to 63-character key.	

KeyIdentification of the base unit when connecting into wireless LAN.

Key	Set the key in accordance with the security settings.
-----	-------------------------------------------------------

Tip of wireless LAN settings

Wireless LAN function is supported in the GL100-WL only.


The GL100-WL has two modes of "Access point" and "Station".

The functions, connectable module, and operating environment of the "Access point" and "Station" are not same.

Access point (operated as base unit)

When 1:1 wireless LAN connection (between the GL100 and PC/smartphone/tablet) is enabled, the following modules and operating environment are required.

• PC or Smartphone that can be connected to the wireless LAN with the dedicated software.

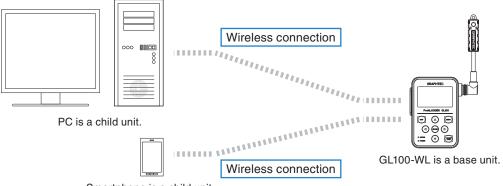


Smartphone is a child unit.

Station (operated as child unit):

When connecting PC to the commercially available wireless LAN base unit and controlling multiple GL100s from PC, the following modules and operating environment are required.

- PC or Smartphone that can be connected to the wireless LAN with the dedicated software.
- Wireless LAN base unit (device with Wi-Fi-certified wireless LAN base unit function)
- Internet connecting environment when you want to connect the Internet (Internet provider agreement or mobile carrier agreement, etc.)
- Internet connecting and e-mail sending/receiving environments when you want to send/receive e-mail (E-mail and web mail for Internet provider)
 - * SMTP and POP3 are required.

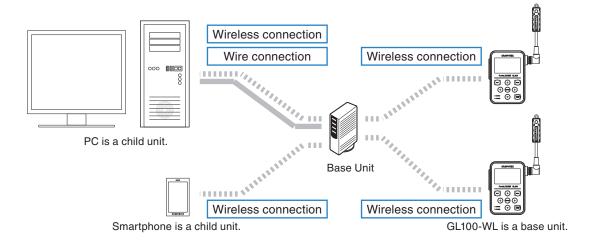

Various settings can be set in the GL100. In addition, there is a way to set by using the GL100-Network_Config software included on the CD-ROM. For the usage and operation, refer to the Help.

MAIL

This can be set for the GL100-WL only.

* When using the GL100-N, this cannot be set.

[MAIL] 7/10

Notification: ∇ User Info.: ∇ Server: ∇ AUTH/SSL: ∇ Destination: ∇ Reception: ∇

• NotificationThe information sent by e-mail can be set to On/Off.

Alarm notification	The alarm information is sent when the alarm occurs.
Battery LOW	The battery information is sent when battery level is low.
Radio field intensity LOW	The radio information is sent when radio field intensity is low.
Disk full	The memory information is sent when remaining capacity of
	SD card is low.

• User Info.Set the mail address, etc. of GL100.

Mail address	Set the e-mail destination address within 63 characters. ****@***.co.jp
Server name	Set the user account names of receiving and sending servers. To set individually, use the GL100-Network_Config software.
Password	Set the user passwords of receiving and sending servers. To set individually, use the GL100-Network_Config software.

• ServerSet the mail sending server of the GL100.

POP Server	Set the mail receiving server.
POP Port	Set the port number in accordance with the POPS of AUTH/ SSL. OFF: 110 STARTTLS: 143 OVERSSL: 993 For detailed settings, follow the POP server available.
SMTP Server	Set the mail sending server.
SMTP Port	Set the port number in accordance with the AUTH/SSL. OFF: 25 STARTTLS: 587 OVERSSL: 465 For detailed settings, follow the SMTP server available.

• AUTH/SSLSet the e-mail authentication and encryption.

AUTH (SMTP)	Off, POP, SMTP-AUTH
SMTP-AUTH	PLAIN, CRAM-MDS
POPS	Off, STARTTLS, OVERSSL
SMTPS	Off, STARTTLS, OVERSSL

• Destination Set the mail destination and subject.

ТО	****@***.co.jp Set within 63 characters.
CC	aaaaa@***.co.jp Set within 63 characters.
CC	bbbbb@***.co.jp Set within 63 characters.
CC	ccccc@***.co.jp Set within 63 characters.
СС	ddddd@***.co.jp Set within 63 characters.
Subject	Set the subject within 63 characters.

• Reception Set the mail receiving time interval and mail data processing.

Receiving interval	Set the receiving interval to 1 to1440 min.
Sending test	The test results are displayed after performing the sending test.
Receiving test	The test results are displayed after performing the receiving test.

OTHER-1

The displayed information varies depending on the module.

OTHER-1 Date∕Time: ∇ Screen Sav:Off ∇ LCD Brightness:off ∇ Language: English ∇ Factory INT: ∇

• Date/TimeAlways check it after power-on.

Mode	YY:MM:DD, DD:MM:YY
Date	2014-07-01, 07-01-2014
Time	10:10:00 (Hour:Minute:Second)

Screen Saver	Off, 2, 5, 0, 20, 30, 60 min.

CAUTION There is no screen display while the screen saver is running, but the Power lamp (green) flashes. In such cases, the screen is displayed by pressing any key.

When the Power lamp (green) does not flash, the GL100 is in Power OFF state. In such cases, hold down [MENU] key.

• LCD BrightnessAdjust the brightness of LCD backlight.

LCD brightness On, Dark, Middle, Bright	LCD brightness	Off, Dark, Middle, Bright	
-------------------------------------------	----------------	---------------------------	--

• Language The display language can be switched to English or Japanese.

(The default display language is English.)

Language	English or Japanese
l Language	English of Japanese

• Factory INTReturn to the factory settings.

All settings will be reset, so please use caution.

Yes: (ENTER)	When [ENTER] key is pressed, the settings are initialized.
No: (QUIT)	To quit this screen without changing, press [QUIT] key.

OTHER-2

The displayed information varies depending on the module.

[OTHER-2] 9/10
TEMP. Unit: °CV
Room TEMP.: INTV
Burn Out: OnV

• TEMP. UnitSet for GS-4VT, GS-3AT, and GS-TH.


TEMP. Unit	Switch the temperature unit to Celsius (°C) or Fahrenheit (°F).
0.4.00.05	

Room TEMP.Set for GS-4VT.

Room TEMP.	Switch to room temperature compensation or external
	compensation


Burn OutSet for GS-4VT.

Burn Out	Set the sensor disconnection display for the thermocouple.
	When the sensor is not connected or disconnected, the
	connection state is displayed in the screen.



ACC. UnitSet for GS-3AT.


ACC. Unit Switch the acceleration unit to G or m/s ² .



• CO2 CalibrationSet for GS-CO2.

CO2 Calibration	Calibrate the minimum value within a certain period of time
	with respect to the reference value.
	This is useful in the environment CO ₂ concentration is low.

When the settings are complete, press [QUIT] key to display the free-running screen.




5. Start or stop the measurement


Measurement start operation

Preparation of 1 to 4 sections is complete, press the [START/STOP] key.

The "ARMED" is displayed until the trigger condition is satisfied from "STOP".

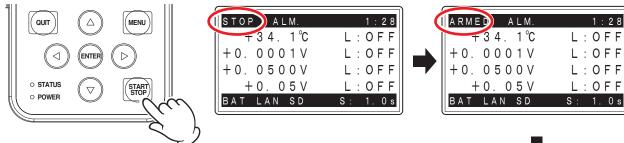


When the trigger condition is satisfied, the "REC" is displayed.

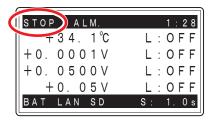

Operation display during measurement

The module's status is shown with the lamp display.

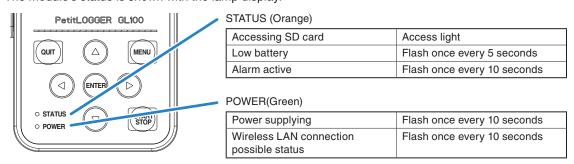




- CAUTION When accessing an SD card, do not remove the SD card. The data may not write properly or the SD card may be damaged.
 - . When low battery is displayed, replace the battery or connect the USB interface to supply power as soon as possible. Caution: Batteries cannot be replaced when recording data. Replace them after the recording has finished.

Measurement stop operation


To stop recording, press the [START/STOP] key.

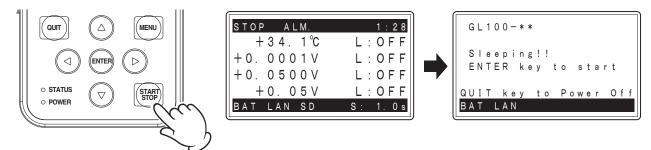




Since the measured data is recorded in file until the Sleeping!!" screen is displayed by pressing the [STOP] key, it takes some time before the screen is switched. Press [ENTER] key to return to the free-running screen.

Press [ENTER] key to return to the free-running screen.

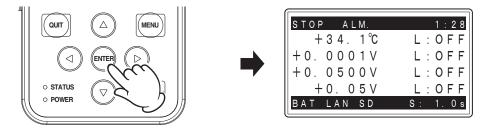


6. How to confirm the recorded data

When you want to confirm the recorded data, replay the data on PC or Smartphone with the dedicated software.

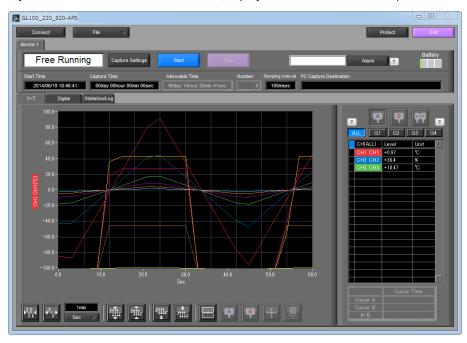

(1) Online data confirmation using USB I/F


Connect between the PC and GL100-N/GL100-WL using USB cable.

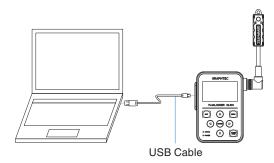

The recorded data can be confirmed by starting the application software and selecting the memory (internal memory or SD card).

(2) Direct data confirmation by inserting SD card

The recorded data can be confirmed by inserting the recorded SD card into the SD card slot on the PC and selecting the SD card using the application software.

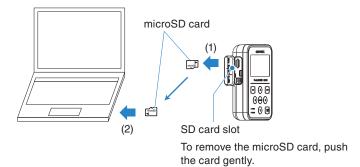


(3) Data confirmation on PC through wireless LAN connection

In the case of wireless LAN connection, this function is disabled unless the communicating conditions are established.

The "I/F" and "MAIL" in "3.4 Measurement Procedure" are required to set. Connect between the GL100 and PC and then set them using the attached GL100-Network_Config software.

• Direct setting of the GL100

[I/F Setting]

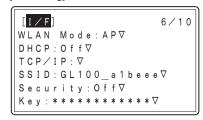


[MAIL Setting]

[MAIL]	7/10
Notification:∇	
User Info.: ∇	
Server: ∇	
AUTH∕SSL: ∇	
Destination: ∇	
Reception: ∇	

• Wireless LAN and Mail settings using the GL100-Network Config.

Using the "GL100-Network_Config" software included on the attached CD-ROM, perform various settings with reference to Help.

Date/Time adjustment, wireless LAN setting, and mail send/receive setting, etc. can be performed.

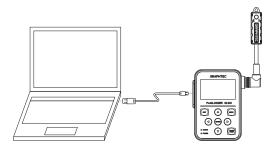


(4) Smart device application software

Using the smart device application software (iOS/Android), the data during recording can be checked and controlled.

The software is available from AppStore (iOS) or GooglePlay (Android).

Digital display, waveform display (Available only when replaying.)



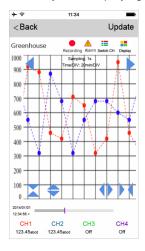

CHAPTER 4 Specification

This chapter describes the basic specifications for the GL100.

Product Summary


- 4.1 Standard Specifications
- 4.2 Standard Specifications (Module)
- 4.3 Specifications of Application Software

4.1 Standard Specifications

GL100-N/GL100-WL

Item		Contents
Input channel number		This depends on the type of module to be used.
Input terminal shape		
Input method		
External input/o	utput	Alarm output 1 channel
PC I/F		USB (Micro-B connector)
		Wireless LAN (GL100-WL only)
		* ON/OFF can be set (It is set to ON at the factory.)
Built-in memory	device	Main Memory: approximate 4.9M Byte
		External memory: microSD card (Please use a commercially available product)
		* 1 file cannot exceed 1.9GB.
		* A microSD card which supports sleep mode is recommended
		TS4GUSDHC4 (Transcend) etc.
Backup function		Setup conditions: EEPROM
		Clock: Backup capacitor
NA th		Time need for backup during battery exchange: approx. 10 hours (at 23°C)
Monitor		Graphic monochrome display (128×64 dot)
Display contents	3	Measured values, settings, etc.
		Note: Recorded data cannot be viewed on this module. Please use the included application software.
Wireless I AN		Standards: IEEE 802.11b
(GL100-WL only	١	Communication distance: approx. 40 m
(GLIOU-VVL OIII))	* It depends on the surrounding obstacles and environmental conditions
		Real-time data transfer rate: 500 ms maximum
Functions	USB I/F	Real-time data transfer rate: 600 ms maximum Real-time display, measured data readout, module settings (PCapplication)
i dilottorio	Wireless LAN	Real-time display, measurement data readout, module settings
	WIICIC33 LAIN	(Android / iOS smartphone application), Email reception function
		Note: GL100-WL only
Alarm output typ)e	Insulation switching type by photo coupler
, marrie oarpar typ		Rating: 30V, 50 mA (power dissipation 150 mW)
Memory content		Recorded Data
Simple waterproof body		IP54 1
Vibration proof		Automobile parts Type 1 Class A equivalen
Rated power		GL100-N: Max. 3.0VA, GL100-WL: Max. 3.5VA
Trated power		* It depends on the type of module to be used.
Power supply		AA alkaline batteries 2 pcs., USB Bus power (5V 200mA or more)
		* USB cable for Micro B-A is included.
		Batteries and USB AC adapter (5V 1A or more) are not included.
Usage environment		-10 to 50°C, 80% RH or less (non-condensing)
External dimensions		66 × 100 × 27 mm (not including protruding parts)
[W×D×H] (approximate)		
Weight (approximate)		GL100-N: 125 g, GL100-WL: 130 g

^{*1:} The IP54 can only be used when the GL100 and module are connected, and the connector over and battery cover are closed. We recommend replacing the packing periodically.

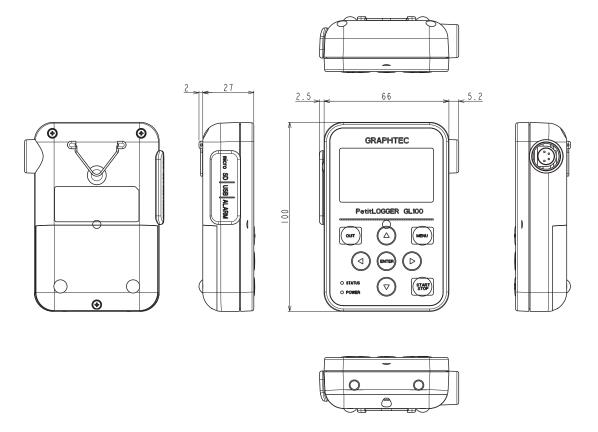


Unit: mm
Dimensional accuracy: ±2 mm

4.2 Standard Specifications (Module)

4ch Voltage / Temperature Terminal (GS-4VT): Optional

Item	Contents	
Measurement data	Voltage / Temperature/Logic, Pulse count (Instant, Accumulation)	
Measurement channels	Voltage/Temperature 4 channels	
	Logic/Pulse count 4 channels	
Input method	Scan system by Photo-MOS relay, All-channel isolated input	
Measurement voltage range 20, 50, 100, 200, 500 mV		
	1, 2, 5, 10, 20, 50V 1-5V F.S.	
Measured voltage accuracy	0.15 % of F.S.	
Input resistance	1MΩ ±5%	
Temperature coefficie	Gain: ±0.01 % of F.S./°C	
	Zero: ±0.02 % of F.S./°C	
Allowable signal source	300Ω or less	
resistance		
Maximum input voltage	Input terminal + / - interval : 60Vp-p	
	Input terminal / Input terminal interval : 60Vp-p	
	Input terminal / GND interval : 60Vp-p	
Withstand voltage	Input terminal / Input terminal interval : 350 Vp-p 1 min.	
	Input terminal / GND interval : 350Vp-p 1 min.	
Insulation resistance	Input terminal / GND interval : $50M\Omega$ or more (at DC500V)	
Common mode rejection ratio	90 dB or more (50/60 Hz signal source 300Ω or less)	
Noise	48 db or more (+/- at short)	
Measurement	<thermocouple> K -200 to 1370°C</thermocouple>	
temperature range	T -200 to 400°C	
Measured temperature	<k-type thermocouple=""></k-type>	
accuracy	-200≤TS≤-100 ±(0.05% of rdg +2.0°C)	
	-100 <ts≤1370°c +1.0°c)<="" of="" rdg="" td="" ±(0.05%=""></ts≤1370°c>	
	<t-type thermocouple=""></t-type>	
	-200≤TS≤-100 ±(0.1% of rdg +1.5°C)	
	-100 <ts≤400°c +0.5°c)<="" of="" rdg="" td="" ±(0.1%=""></ts≤400°c>	
Lagia/Dulag Issaut	Reference junction compensation accuracy: ±0.5°C	
Logic/Pulse Input	Input voltage range: 0 to +24V (One line ground input) Input signal: No-voltage contact (a contact, b contact, NO, NC)	
	Open collector, voltage input	
	Input threshold voltage: approx. +2.5V	
	Hysteresis: approx. 0.5 V (+2 to -2.5V)	
Pulse measurement	Instant : max. 200C / Sampling	
range	Accumulation: max. 65535C	
Room temperature compensation	ON / OFF	
Temperature uni	Select from °C (Celsius) / °F (Fahrenheit)	
Sampling interval	0.5, 1, 2, 5, 10, 20, 30 sec.	
Camping intolval	1, 2, 5, 10, 20, 30, 60 min.	
Alarm	OFF / Level	
Cable Length Approximate 20 cm		
Usage environment	-10 to 50°C, 80% RH or less (non-condensing)	
External dimensions [W×D×H] (approximate)	46 × 66 × 35.5 mm (not including protruding parts)	
Weight (approximate)	85 g	
(approximate)	~~ 5	

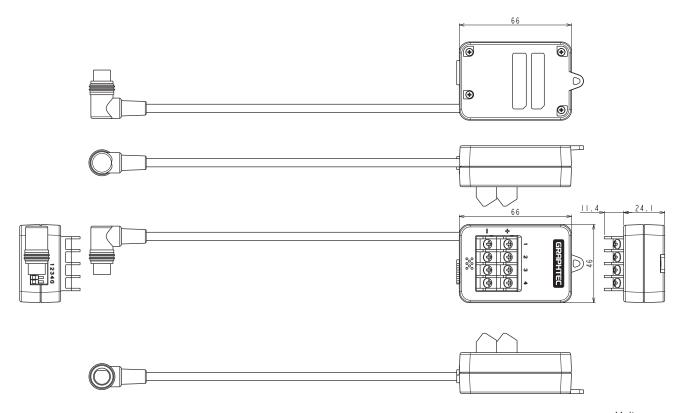


Unit: mm

Dimensional accuracy: ±2 mm

3-axis Acceleration / Temperature Sensor (GS-3AT): Optional

Item	Contents	
Measurement data	Acceleration (3-axis) / Temperature	
Acceleration range	±2 G (20m/s ²), ±5 G (50m/s ²), ±10 G (100m/s ²)	
Measured acceleration accuracy(Non-linearity)	±2% of F.S.	
Band	0 to 100Hz	
Noise	25 mGrms	
Measurement temperature range	-10 to 50°C (14°F to 122°F)	
Measured temperature accuracy	-10 ≤ TS ≤ 50 ±1.0 (°C)	
Response time (temperature)	Approx. 300 sec.	
Measurement mode	Memory mode and Direct mode	
Memory capacity (Memory mode)	16, 32, 64, 128 k sample	
Pre-trigger (Memory mode)	OFF / 10, 25, 50, 100%	
Sampling interval	<memory mode=""> 5, 10, 20, 50, 100 ms <direct mode=""> 0.5, 1, 2, 5, 10, 20, 30 sec. 1, 2, 5, 10, 20, 30, 60 min.</direct></memory>	
Alarm	OFF / Level	
ADJUST function	Set / Reset Note: This function will set the current static acceleration value to zero.	
Waterproof sensor	IP54	
Cable length	Approximate 20 cm	
Usage environment	-10 to 50°C, 80% RH or less (non-condensing)	
External dimensions [W×D×H] (approximate)	$51 \times 36 \times 19.5$ mm (not including protruding parts)	
Weight (approximate)	64 g	

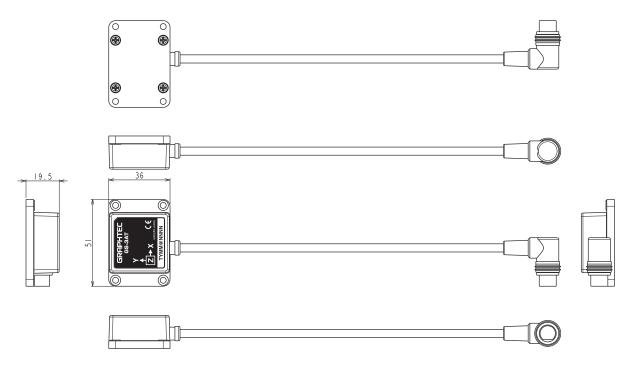


Unit: mm

Dimensional accuracy: ±2 mm

4ch Thermistor Terminal (GS-4TSR): Optional

Item	Contents	
Measurement data	Temperature/Logic, Pulse count (Instant, Accumulation)	
Measurement channels	Temperature 4 channels	
	Logic/Pulse count 4 channels	
Input method	Scan method, non-isolated input (Thermistor input)	
Temperature range	Type A: -40°C to 105°C (GS-103AT-4P)	
	Type J: -40°C to 120°C (GS-103JT-4P)	
Measured temperature	<main module=""> $-40 \le TS < 0 \pm 0.7 (^{\circ}C)$</main>	
accuracy	0 ≤ TS ≤ 35 ±0.2 (°C)	
	35 < TS ≤ 70 ±0.4 (°C)	
	70 < TS ≤ 120 ±1.0 (°C)	
	<thermistor sensor=""> ±0.4°C(Typical value)</thermistor>	
Logic / Pulse Input	Input voltage range: 0 to +24V (One line ground input)	
	Input signal: No-voltage contact (a contact, b contact, NO, NC),	
	Open collector, voltage input	
	Threshold level: approx. +2.5V	
	Hysteresis: approx. 0.5V (+2 to +2.5V)	
Pulse measurement range	Instant : Max. 200C / Sampling	
	Accumulation: Max. 65535C	
Temperature unit Select from °C (Celsius) / °F (Fahrenheit)		
Sampling interval	0.5, 1, 2, 5, 10, 20, 30 sec.	
	1, 2, 5, 10, 20, 30, 60 min.	
Triggers	Start trigger: OFF, LEVEL, ALARAM, DATE	
	Stop trigger : OFF, LEVEL, ALARAM	
Alarm	OFF / Level	
Cable length	Approximate 20 cm	
Usage environment -10 to 50°C, 80% RH ore less (non-condensing)		
External dimensions	$46 \times 66 \times 35.5$ mm (not including protruding parts)	
[W×D×H] (approximate)		
Weight (approximate)	83 g	

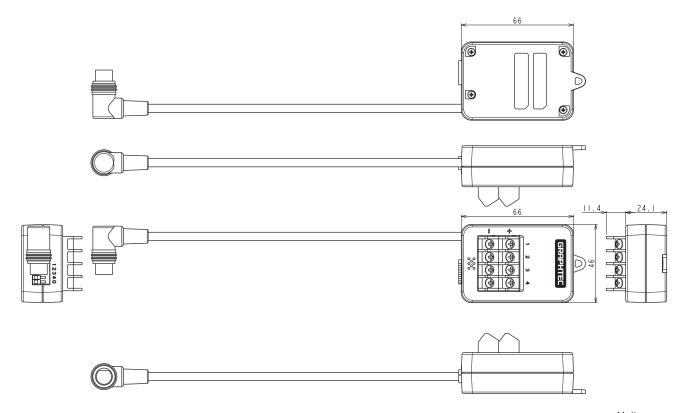

Unit: mm

Dimensional accuracy: ±2 mm


Adapter for AC Current Sensor (GS-DPA-AC): Optional

Item	Contents	
Measurement data	Current, power, accumulated power	
	* The accumulated power is displayed only when recording.	
Connectable sensors	50A AC Current Sensor (GS-AC50A)	
	100A AC Current Sensor (GS-AC100A)	
	200A AC Current Sensor (GS-AC200A)	
	* This is optional.	
Measurement channel	Connectable sensor: up to 2 channels	
Measured current	<module +="" sensor=""></module>	
accuracy	±2.0% FS ± 1 digit	
	Ambient temperature 23°C, Rated input, Rated frequency	
Frequency to be measured	50Hz / 60Hz	
Applicable circuit	Single-phase 2-wire	
	Single-phase 3-wire	
	3-phase 3-wire	
Measured value display Current and power		
function	(Instantaneous power or accumulated power consumption)	
Primary rated current	50A AC Current Sensor: 50A	
	100A AC Current Sensor: 100A	
	200A AC Current Sensor: 200A	
Withstand voltage	Between case and all input/output terminals interval	
	AC1000V, 50/60Hz, 1 min.	
Sampling interval	0.5, 1, 2, 5, 10, 20, 30 sec.	
	1, 2, 5, 10, 20, 30, 60 min.	
Alarm	OFF / Level	
Cable length	Approx. 20 cm	
Usage environment	-10 to 50°C, 80% RH or less (non-condensing)	
External dimensions	46 × 66 × 27.4 mm (not including protruding parts)	
[W×D×H] (approximate)		
Weight (approximate)	55 g	

AC Current Sensor Specifications

The AC Current Sensor has the specifications below. Be careful when handling it.


Item	Contents			
Max. allowable current	GS-AC50A: 100Arms			
	GS-AC100A: 200Arms			
	GS-AC200A: 300Arms			
Withstand voltage	AC2200V, 1 min. (between external case and output terminals)			
Insulation resistance	DC500V, 100MΩ or more (between external case and output terminals)			
Window diameter	GS-AC50A: \$10 mm			
	GS-AC100A: 016 mm			
	GS-AC200A: ф24 mm			
Operating temperature and	-10 to 50°C, 80% RH or less (non-condensing)			
humidity				
Cable length	Approx. 20 cm			
External dimensions	GS-AC50A: 26.4 x 25.5 x 43.3 mm			
[W×D×H] (approximate)	GS-AC100A: 27.4 x 30.5 x 46.2 mm			
	GS-AC200A: 48.4 x 35 x 40 mm			

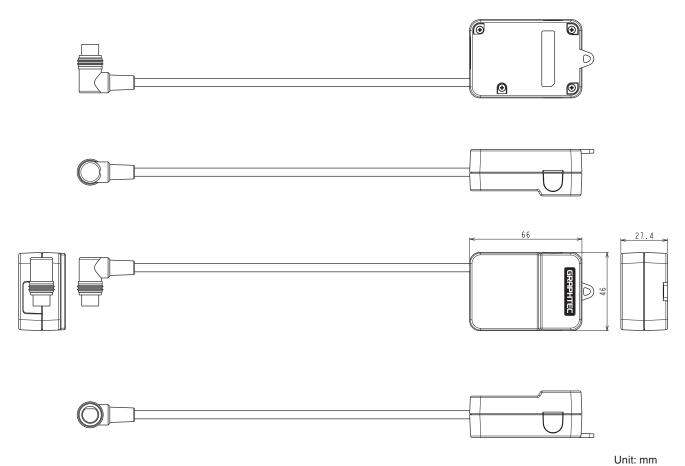

Dimensional accuracy: ±2 mm

Illumination / Ultraviolet Sensor (GS-LXUV): Optional

Item	Contents			
Measurement data	Illuminance, ultraviolet, accumulated illuminance, accumulated ultraviolet intensity			
	* The accumulated illuminance and ultraviolet intensity are displayed only when recording.			
Measurement channel	Illuminance: 1 channel			
	UV intensity: 1 channel			
Measurement range	Illuminance: 0 to 200k lx			
	UV intensity: 0 to 30 mW / cm ²			
Measurement accuracy	Illuminance: ±5% (at 25°C)			
	Ultraviolet intensity: ±5% (at 25°C)			
Spectral sensitivity	Illuminance: 400 to 750 nm (peak 560 nm)			
	UV intensity: 260 to 400 nm (peak 370 nm)			
Measurement resolution	nent resolution Illuminance: 0.1 lx			
	UV intensity: 0.001 mW/cm ²			
Responsive	Illuminance: 1 ms or less			
	UV intensity: 1 ms or less			
Accumulated function	Accumulated illuminance: 0 to 999,999 k lxh			
	Accumulated UV intensity: 0 to 999,999 mW/cm²h			
Sampling interval	0.5, 1, 2, 5, 10, 20, 30 sec.			
	1, 2, 5, 10, 20, 30, 60 min.			
Alarm	OFF / Level			
Cable length	Approximate 20 cm			
Usage environment	-10 to 50°C, 80% RH or less (non-condensing)			
External dimensions	46 × 66 × 19 mm (not including protruding parts)			
[W×D×H] (approximate)				
Weight (approximate)	65 g			

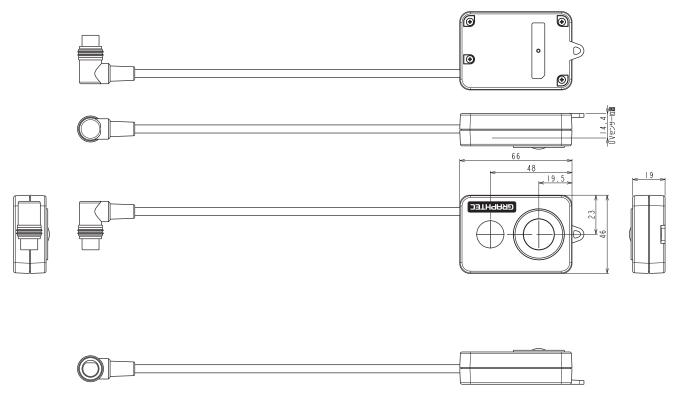


Unit: mm

Dimensional accuracy: ±2 mm

CO2 Sensor (GS-CO2): Optional

Item	Contents				
Sensor method	NDIR system				
Measurement data	CO ₂ density				
Measurement channel	1 channel				
Measurement density	0 to 9999 ppm				
range					
Measurement density	±(5% of rdg + 30 ppm)				
accuracy	* Within the range of 0 to 5000 ppm				
Responsive	3 minutes or less				
Sampling interval	0.5, 1, 2, 5, 10, 20, 30 sec.				
	1, 2, 5, 10, 20, 30, 60 min.				
	* The processing of sensor is every 2 sec. Even if setting it to 0.5 or 1 sec., the data is				
	processed at the same value (2 sec.).				
Alarm	OFF / Level				
Cable length	Approximate 20 cm				
Usage environment	0 to 50°C, 80% RH or less (non-condensing)				
External dimensions	66 × 100 × 24.6 mm (not including protruding parts)				
[W×D×H] (approximate)					
Weight (approximate)	99 g				

^{*} We recommend replacing the module periodically.

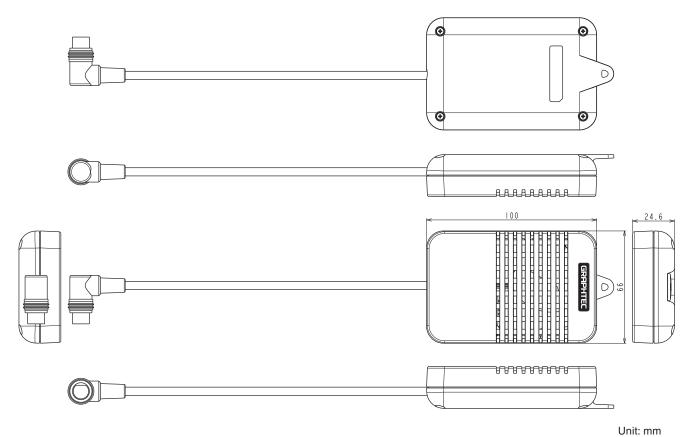


Dimensional accuracy: ±2 mm

Temperature / Humidity Sensor (GS-TH): Optional

Item	Contents				
Measurement data	Temperature, humidity, dew point temperature (calculated value), accumulated temperature				
	* The accumulated temperature is displayed only when recording.				
Measurement system	C-MOS Sensor				
Measurement temperature range	-20°C to 85°C				
Measured temperature	-20 ≤ TS < 0 ±0.8 (°C)				
accuracy	$0 \le TS \le 60 \pm 0.5 (^{\circ}C)$				
	60 < TS ≤ 85 ±0.8 (°C)				
Measurement humidity range	0.0 to 100.0% RH				
Measured humidity accuracy	25°C				
	$0 \le RH < 10 \pm 10 (\%)$				
	10 ≤ RH < 20 ±8 (%)				
	$20 \le RH \le 80 \pm 5$ (%)				
	$80 < RH \le 90 \pm 8 (\%)$				
	90 < RH ≤ 100 ±10 (%)				
Response time	Temperature and humidity: 100 sec.				
	(63% response, 25°C Air flow rate 1 m/s)				
	* The sensor's responsiveness is affected by the measured temperature and air flow rate.				
Sampling interval	0.5, 1, 2, 5, 10, 20, 30 sec.				
	1, 2, 5, 10, 20, 30, 60 min.				
Alarm	OFF / Level				
Waterproof treatment	Sensor unit With waterproof filter				
Temperature unit	Select from °C (Celsius) / °F (Fahrenheit)				
Usage environment	Within the measurement range of temperature and humidity				
	However, set it to the environment if the GI100 and this sensorare in the same environment.				
External dimensions	15 × 45 × 10.2 mm (not including protruding parts)				
[W×D×H] (approximate)					
Weight (approximate)	14 g				


^{*} We recommend replacing the module periodically.

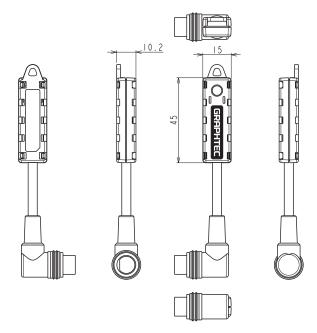

Unit: mm
Dimensional accuracy: ±2 mm

GS Branch Adapter(GS-DPA): Optional

Item	Contents
Number of connectors	2 channels
Connectable sensor	Temperature and humidity sensor (GS-TH)
	Illumination / ultraviolet sensor (GS-LXUV)
	CO₂ sensor (GS-CO2)
Cable length	Approximate 20 cm
Usage environment	-10 to 50°C, 80% RH or less (non-condensing)
External dimensions	46 × 66 × 27.4 mm (not including protruding parts)
[W×D×H] (approximate)	
Weight (approximate)	68 g

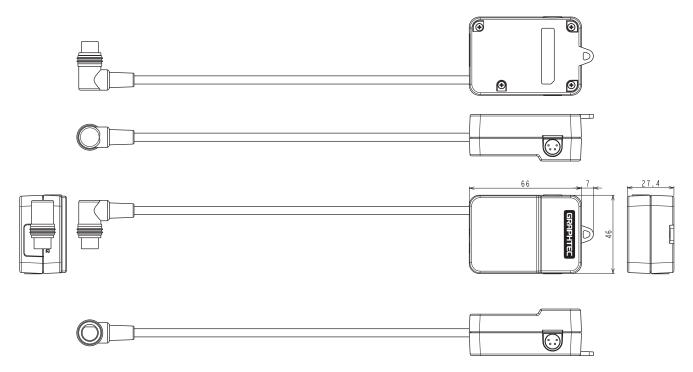

Unit: mm

Dimensional accuracy: ±2 mm

4.3 Specifications of Application Software

GL100-APS

Item	Contents			
Supported OS	Windows 8.1/8/7/Vista (64/32bit)			
Connection interface	USB, Wireless LAN			
Function	Module control, real-time data recording, file conversion, data replay			
Module Setting	Input, recording, alarm, and trigger settings			
Recorded data	Real-time data (GBD binary, CSV)			
	Memory data			
	SD card data			
Displayed information	Analog waveform, logic waveform, pulse waveform, digital value			
Display mode	Y-T display, digital display, statistics and history displays, cursor display between the X and			
	(replay only)			
File convert	Between cursors, all data, culling function			
Monitor function	Sending an E-mail to the address specified in the alarm monitoring, periodically sending E-mail			
Report function	Daily report and monthly report files are automatically generated.			

GL100-Network_Config

Item	Contents			
Supported OS	Windows 8.1/8/7/Vista (64/32bit)			
Connection interface	USB			
Function	USB driver installation, GL100 firmware update, time adjustment, module name setting,			
	wireless LAN settings, E-mail send and receive settings			

Smart Device Application Software

Item	Contents			
Supported OS	iOS (7.0 or higher), Android (4.1 or higher)			
Connection interface	Wireless LAN			
Function	Digital display, waveform display (only when replaying), recording start/stop control, sampling interval change, E-mail sending module control function, customized function			

INDEX

Sign	M
3-axis Acceleration / Temperature Sensor 2-11	MAIL
4ch Thermistor Terminal 2-13	Measurement Procedure 3-12
4ch Voltage / Temperature Terminal 2-8	microSD
	microSD slot
A	Module Connection Terminal 2-4
Accessories	Module connection terminal 2-6
Adapter for AC Current Sensor 2-16	Module 2-3
Adapter for Branch Adapter	Monitor
ALARM	Mounting screw holes 2-4
Alarm Output Terminal 2-4, 2-7	
AMP	N
	Nomenclature and Functions 2-4
В	
Battery cover 2-4	0
Before Setting Up	Operating Environment
•	Operation key
C	OTHER-1
Checking the Accessories 2-2	OTHER-2 3-23
CO2 Sensor	
Connector cover	P
	Power-on
D	
DATA	S
date adjustment	Safety Precautions
date adjustment.	Specifications of Application Software
E	Standard Accessories
External View	Standard Specifications
External view 4-5	Standard Specifications (Module)4-4
н	
Hook bracket	Т
How to confirm the recorded data	Temperature / Humidity Sensor
How to connect AC adapter 3-6	time adjustment
How to connect to PC	To Ensure Safe and Correct Use
How to install the batteries	TRIGGER 3-17
How to Switch On the Power	
How to Switch to Power OFF Mode	U
TIOW to Ownton to Fower Of Fillhoute	USB I/F
ı	USB I/F terminal
■ I/F	2-4
Illumination / Ultraviolet Sensor	V
iliumination / Ottraviolet Sensor 2-22	Various Connections
ı	various Connections2-6
L	W
LOGIC	
	Warming-up

Specifications are subject to change without notice.

GL100 Series User's Manual GL100-UM-151 July 11 2014 1st edition-01

GRAPHTEC CORPORATION

